

Titan Pro

Convertible Booster Seat

Suitable from 6 months up to approx. 8 years



IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT.

Illustrations and designs may vary



MAXI-COSI®

We carry the future

CONVERTIBLE BOOSTER SEAT

Dear Customer,

Congratulations on the purchase of your brand new Maxi-Cosi car seat, we hope you and your little one will have plenty of hours of fun together!

Our car seats are so good, we've put them under a Lifetime Warranty - so you can enjoy them for years to come. Don't forget to register within three months after purchase.

In the event of a car accident, your Maxi-Cosi child restraint may have unseen damage from crash forces. The Maxi-Cosi Accident Exchange Service offers new for old Maxi-Cosi child restraint replacement in the event of a serious accident (where a police report is required), giving you peace of mind knowing your child is correctly protected.

Need assistance?

Call our Customer Service Centre:
1300 809 526

Monday to Friday
(8:30am-5:00pm AEST)

or send an email:
customerservice@dorel.com.au





Don't forget to please register your
product warranty by visiting :
warranty.dorelaustralia.com.au

A blue paperclip icon is positioned at the top right corner of the white note box.

Always keep the
original tax receipt
for your product.



We Carry The Future

Life is one big adventure, and becoming a parent is the biggest adventure of all.

And we would know. Because we're parents too.

It's a road full of milestones, moments and unforgettable journeys - starting with the first trip home from the hospital. We understand how important it is for new parents to feel supported right from the start. That's where Maxi-Cosi comes in.

We're there from day one... and for every day that follows. We care about giving parents child mobility solutions they can trust - car seats and strollers that are safe, smart and easy to use. With Maxi-Cosi, parents know their children are in the best hands possible. So they can focus on the other things that matter, like living in the moment and seeing the joy and wonder of life in a whole new way. That's what being a parent is really about.

We get it, and we care.

We always have.

It was thirty years ago that we launched Europe's first baby car seat and since then, we've carried over 50 million babies home from the hospital.

We were pioneers then, and we're pioneers now. That's why we'll never stop improving, designing, and perfecting the way new families move around the world - wherever life's adventures may take them.





Please read and follow all of the instructions outlined in this manual for maximum protection.

If you have any questions regarding the installation or use of this child restraint in Australia or New Zealand, please contact our customer service numbers provided. An alternative option is to also contact any registered child fitting station authorised by your local transport authority.

No child restraint can guarantee absolute protection from a crash. However proper use of this restraint may reduce the risk of injury or death.

WARNINGS

IMPORTANT: RETAIN FOR FUTURE REFERENCE

THESE INSTRUCTIONS DETAIL THE SAFE USE, FITMENT AND MAINTENANCE OF THE SEAT.

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND ENSURE THAT THEY ARE FOLLOWED AT ALL TIMES.

NO SAFETY SEAT CAN GUARANTEE PROTECTION FROM INJURY HOWEVER, PROPER USE OF THIS SEAT REDUCES THE RISK OF SERIOUS INJURY OR DEATH TO YOUR CHILD.

THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR.

Follow the manufacturer's instructions at all times.

- To be used in a forward-facing position with built-in harness by a child whose shoulders are above the lower shoulder height marker (approximately 6 months of age) until their shoulders reach the middle shoulder height marker (approximately 4 years of age).
- Then to be used with a lap-sash seatbelt until the child's shoulders reach the upper shoulder height marker (approximately 6 to 8 years of age).
- Continue to use this child restraint until the child reaches this limit. Children are safest in a booster seat until their shoulders reach the upper shoulder height marker of the booster seat.
- Do not use this child restraint until child's shoulders are above the lower shoulder height marker.



WARNINGS

- THIS RESTRAINT MUST BE USED IN CARS WITH FORWARD-FACING SEATS WITH A LAP-SASH SEATBELT. THIS BOOSTER SEAT IS NOT SUITABLE FOR USE WITH A CHILD HARNESS.
- If the knees do not bend in front of the vehicle seat cushion continue to use a booster seat.
- Just using a seatbelt is not recommended for children that have outgrown this seat. Use a larger booster seat.
- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible.
- **DO NOT USE THIS RESTRAINT WITHOUT THE COVER.**
- **DO NOT USE WITH JUST A LAP BELT.** You must use with a lap-sash seatbelt.
- The lap part of the seatbelt must be firmly across the thighs and the sash belt fitted diagonally across the chest and on the shoulder.
- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.
- A loose restraint or harness is dangerous.
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into a split in the seat back or off the side of the seat.
- **ALWAYS ATTACH HOOK AND REMOVE SLACK.**
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then advice should be sought from a child restraint fitter and their recommendation be considered before using a seatbelt extender.
- This child restraint is not approved for use with any connectors that connect to the car's ISOFIX low anchorages.
- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint.



WARNINGS

- Care and attention should always be given to ventilation and shading of the occupant.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by child restraint and may cause injury or death. For approved aftermarket accessories please refer to **page 30**.
- Ensure the belt webbing is not twisted.
- **TO BE USED WITH A LAP-SASH SEATBELT IN THE FRONT/BACK OF MOST CARS WITH FORWARD FACING SEATS.**

TABLE OF CONTENTS

	Welcome-----	2
	Registration-----	3
	Introduction-----	4
	WARNINGS -----	6
	QUICK START	
	What's in the Box?-----	10
	Components-----	11
	Car installation-----	13
	Car installation – Harnessed mode-----	15
	Converting to Booster mode -----	19
	Car installation – Booster mode -----	25
	VEHICLE INFORMATION	
	Correct Forward-Facing Vehicle Position-----	29
	Location of Top Tether Anchorage Point-----	30
	Correctly Connecting the Top Tether-----	31
	Anchorage Fitting Installation-----	32
	OPERATION AND ADJUSTMENTS	
	Headrest adjustment-----	36
	Recline adjustment-----	36
	Securing and adjusting Top Tether strap -----	37
	Shoulder height markers – Harnessed mode-----	39
	Adjusting the harness-----	40
	Fastening the buckle assembly -----	42
	Shoulder height markers – Booster mode -----	43
	The next seat for your child -----	44
	CARE AND MAINTENANCE	
	Caring for the buckle-----	45
	Caring for the seat fabrics-----	46
	Cleaning shell-----	50
	GUARANTEE -----	51



What's in the Box?



Instruction
Manual



- | | |
|--|---|
| A. Air protect cell (x2) | H. Harness release lever (under trim) |
| B. Sash guide for booster mode (x2) | I. Recline handle |
| C. Belt mates (x2) | J. Base |
| D. 6-point harness | K. Harness tightening strap |
| E. Baby/Toddler insert | L. Booster Seat Belt Path Markers (x2) |
| F. Buckle | M. Harness storage compartment (under trim) |
| G. Buckle storage compartment (under trim) | N. Height markers (x3) |



Components



- O. Headrest adjustment handle
- P. GCELL (x2)
- Q. Top Tether hook
- R. Top Tether strap
- S. Storage pocket (instruction manual & excess tether strap webbing)
- T. Belt path
- U. Forward Facing Belt Path Markers (x2)


FORWARD FACING BELT PATH



HARNESSED MODE (6 months – 4 years approximately)



+

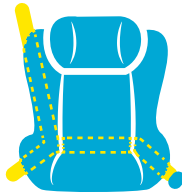

+



BOOSTER MODE (4 years – 8 years approximately)







+





Car installation


POSITIONING IN THE VEHICLE

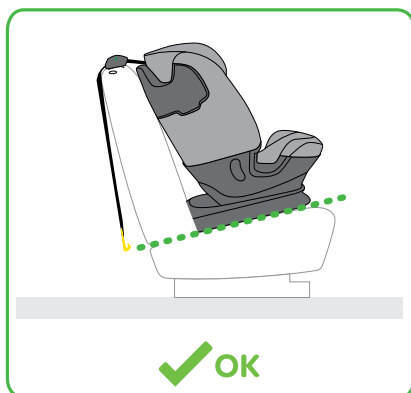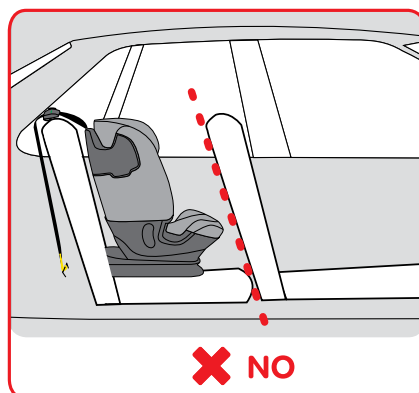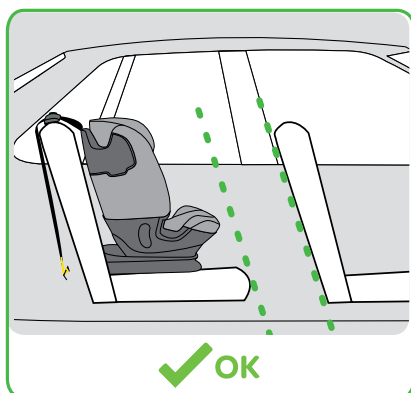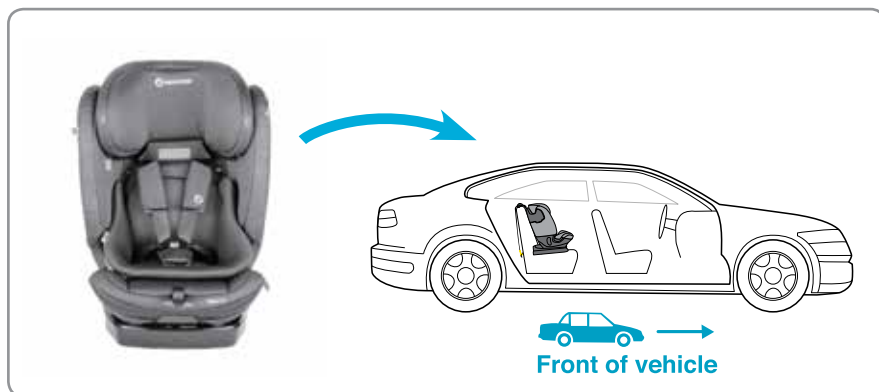



SECURING THE SEAT IN THE VEHICLE


1. Preparation of Top Tether

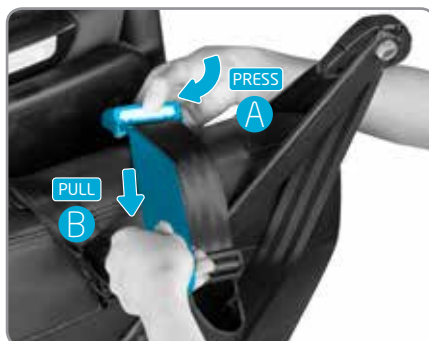




Car installation - Harnessed mode

2. Seat belt installation

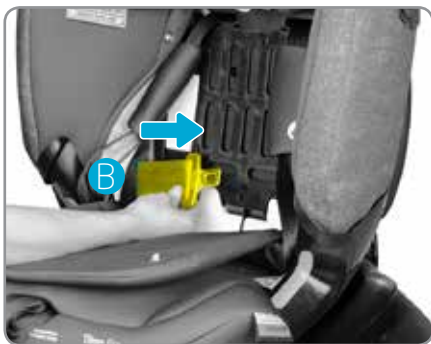

Car installation - Harnessed mode

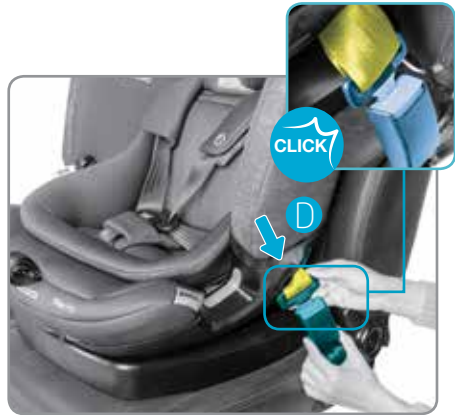

Place one hand on seat and firmly press the child restraint down into the vehicle seat and pull on seatbelt to remove slack.



Continue to remove slack, placing one hand on seat and firmly pressing the child restraint down into the vehicle seat and pull on seatbelt to remove slack.

NOTE: If the car seatbelt is not long enough to secure the child restraint, **DO NOT USE SEAT BELT EXTENDERS.**

NOTE: There is an option to install seat using seat belt with accessory locking clip. Please see instructions provided with locking clip for installation.




Car installation - Harness mode

3. Attachment of Top Tether



Attach the Top Tether hook to the anchorage point. Adjust until all the slack is removed.

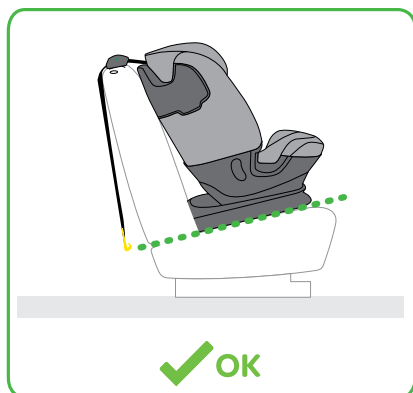

NOTE: Ensure the base of the seat is not lifted from the car seat.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child. Please store excess webbing in the rear pocket at the rear of the restraint.



CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.

Converting to Booster Mode




IMPORTANT: Make sure the harness is pulled fully out.

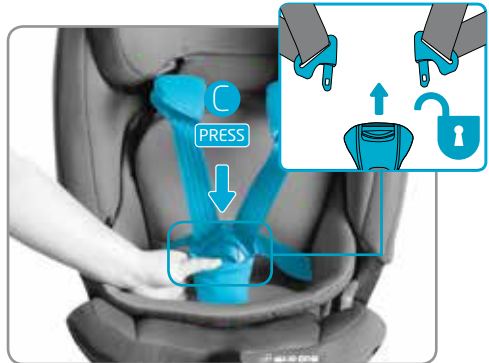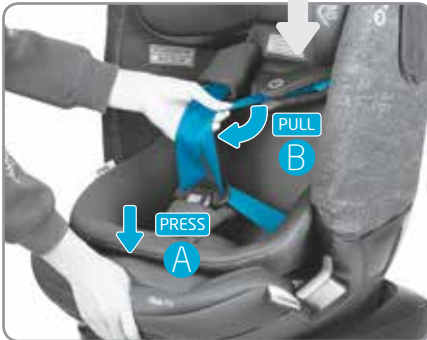



Converting to Booster Mode




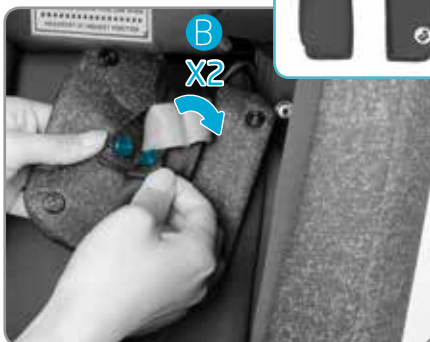


Converting to Booster Mode







Converting to Booster Mode

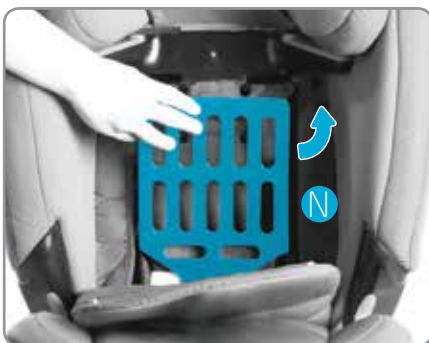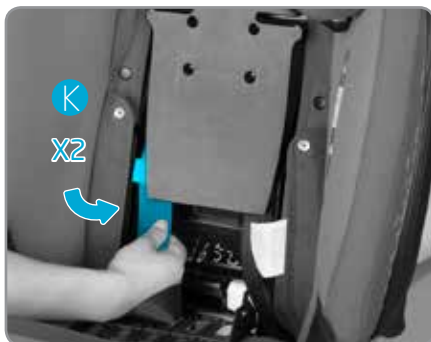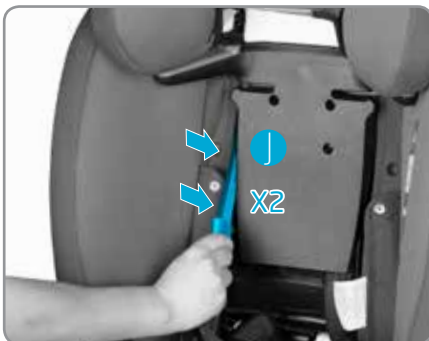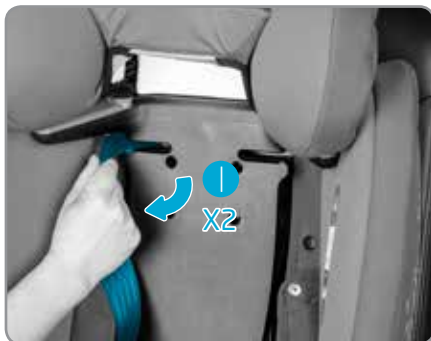

Converting to Booster Mode

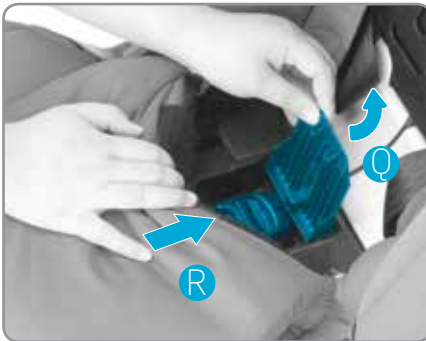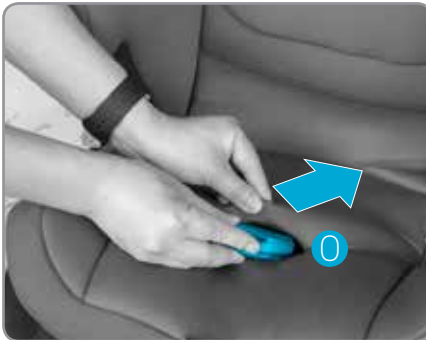




Converting to Booster Mode





POSITIONING IN THE VEHICLE

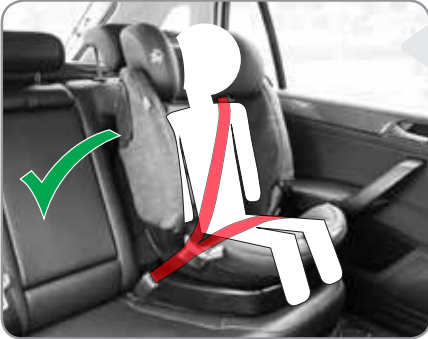


Correct and Safe Positioning

Use only the vehicle's lap-sash seat belt when restraining the child in the booster seat.



Incorrect Positioning

NEVER use a vehicle's lap-only belt across front of the child and booster seat. It **WILL NOT** restrain your child's shoulders in the event of an accident and could result in serious injury.

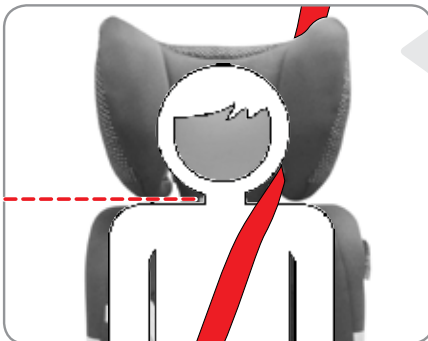

Correct Shoulder Position


To ensure the correct head support is obtained, the bottom of the headrest **MUST** be even or slightly higher with the top of child's shoulders.



Car Installation - Booster mode

NOTE: If the vehicle seat belt lays across the child's neck or face, then readjust the headrest height.

CAUTION: In the event of a crash, a seat belt across the child's throat could cause a strangulation hazard.

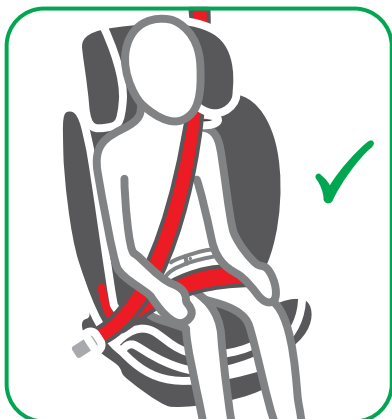

WARNING

A SASH BELT UNDER THE ARM OR BEHIND THE BACK IS DANGEROUS.



SECURING THE SEAT IN THE VEHICLE




Place the booster seat firmly against the back of a forward facing vehicle seat equipped with a lap and shoulder belt only.



DO NOT place the booster seat in a vehicle without the tether strap attached to the vehicle's anchor fitting. Refer to page 37 and page 38.




SECURING YOUR CHILD IN VEHICLE

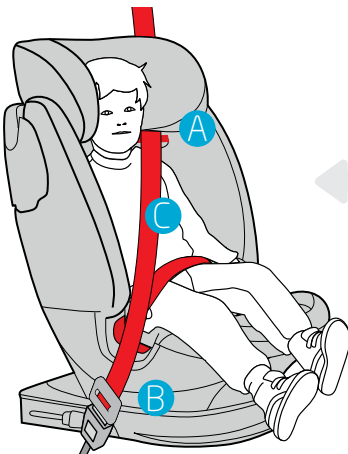


Have your child sit in the booster seat with their back flat against its back.




Car Installation - Booster mode

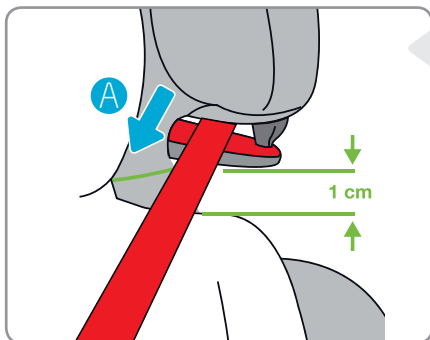

ALWAYS USE THE SASH GUIDE

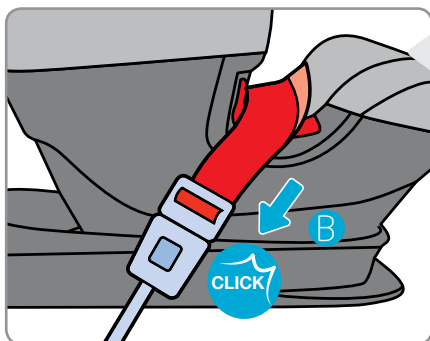

The lap belt portion **MUST** be positioned low on the hips. The vehicle's seatbelt **MUST NOT** be twisted.



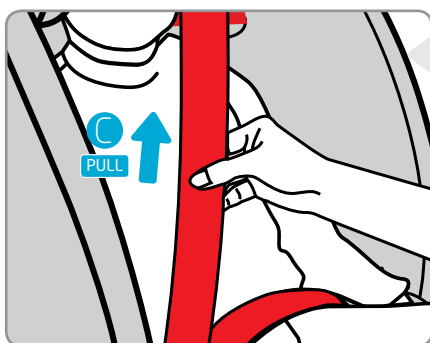


Pull up on the shoulder belt to tighten.

⚠ WARNING


DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.

Correct Forward-Facing Vehicle Position

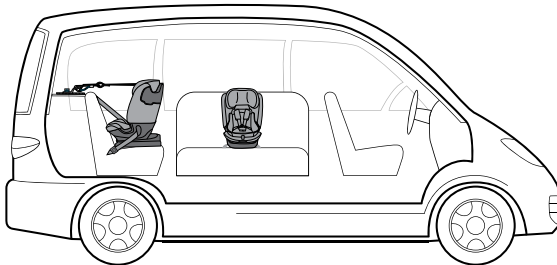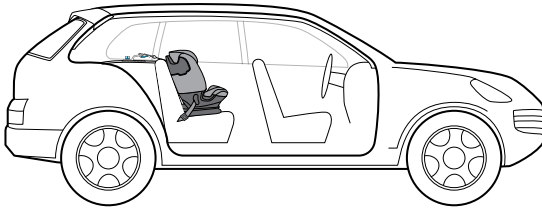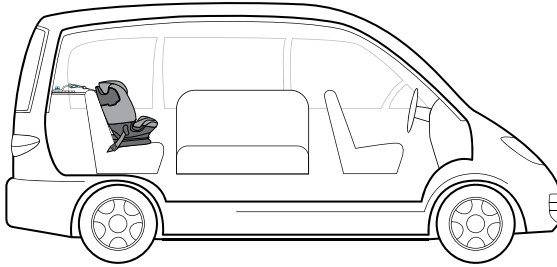



Location of Top Tether Anchorage Point

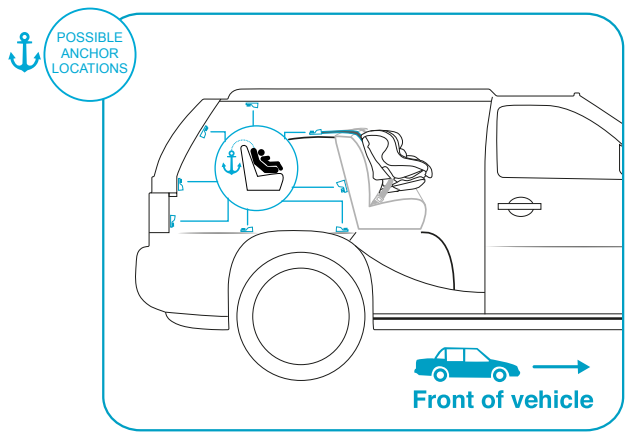

NOTE:

- The anchor point can be found in different locations in different car. The illustration above shows possible locations of anchor points. Sometimes it is on the parcel shelf in sedans, and on the floor area in station wagons, vans and hatchbacks. Make sure that you do not confuse the luggage hook in the back of a station wagon with anchor points. Refer to your owner’s manual.
- An extension strap may be needed for vehicles without a fixed parcel shelf. Extension straps and extra fittings are available from various stores.

Extension straps 300mm ref no. 014398	Extension straps 600mm ref no. 014399
Anchor bolt kit ref no. 014400	Locking clip ref no. 014401

Use of aftermarket accessories (i.e. items not provided in the box with the child restraint) can reduce the safety provided by the child restraint and may cause injury or death.

Correctly Connecting the Top Tether



Child restraints must be used correctly to provide proper protection for your child. The anchorage system on child restraint must be used in the correct way.

CORRECT

Make sure there is no slack in the top tether strap and the attachment clip is upright in the anchorage fitting.

INCORRECT

The clip must not lie flat on the anchorage fitting.



Figure 1

INSTALLATION

Anchages in vertical panel at rear of vehicle

Correct

Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.

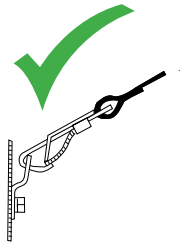



Figure 2

INSTALLATION

Floor mounted anchorages


Correct

Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.

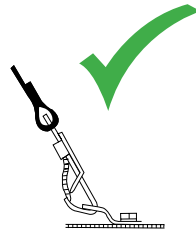


Incorrect

The clip must not lie flat on the anchorage fitting.

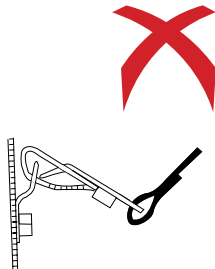

Incorrect

The clip must not lie flat on the anchorage fitting.

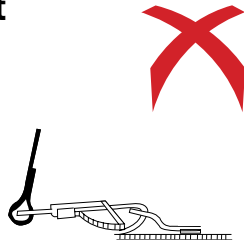




Anchorage Fitting Installation

FOR CARS FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT

Locate the upper anchorage point behind the rear seating position (consult the car owner's handbook for the location of the upper anchorage point).

Remove the thread plug from the parcel shelf/floor/roof and install the attachment bolt as shown in **Figure 1**.

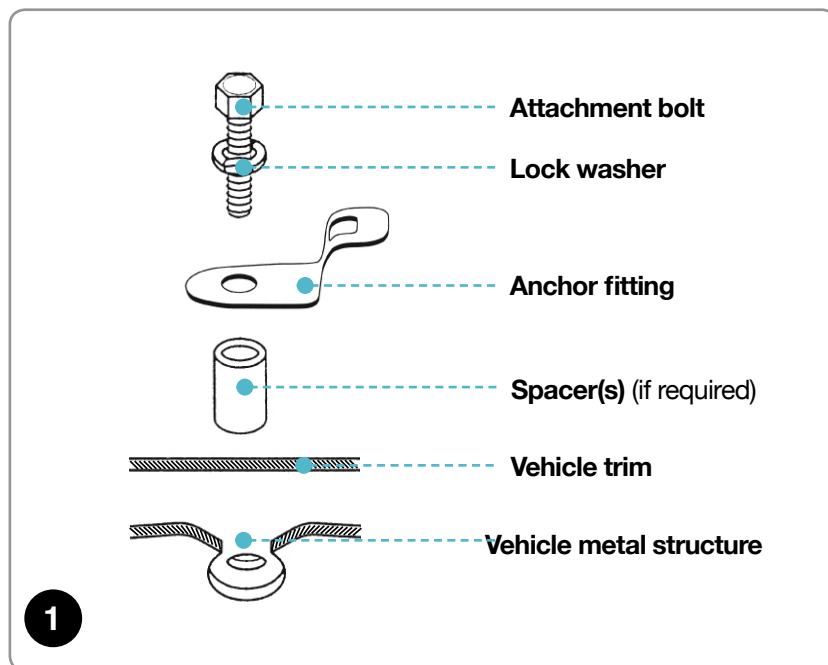


CAUTION: DO NOT OVERTIGHTEN THE ATTACHMENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm.

FOR CARS NOT FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT

FOR SEDANS ONLY:


- A. Drill a 9mm diameter hole in the parcel shelf on the centre-line of the seating position as shown in **Figure 2**.

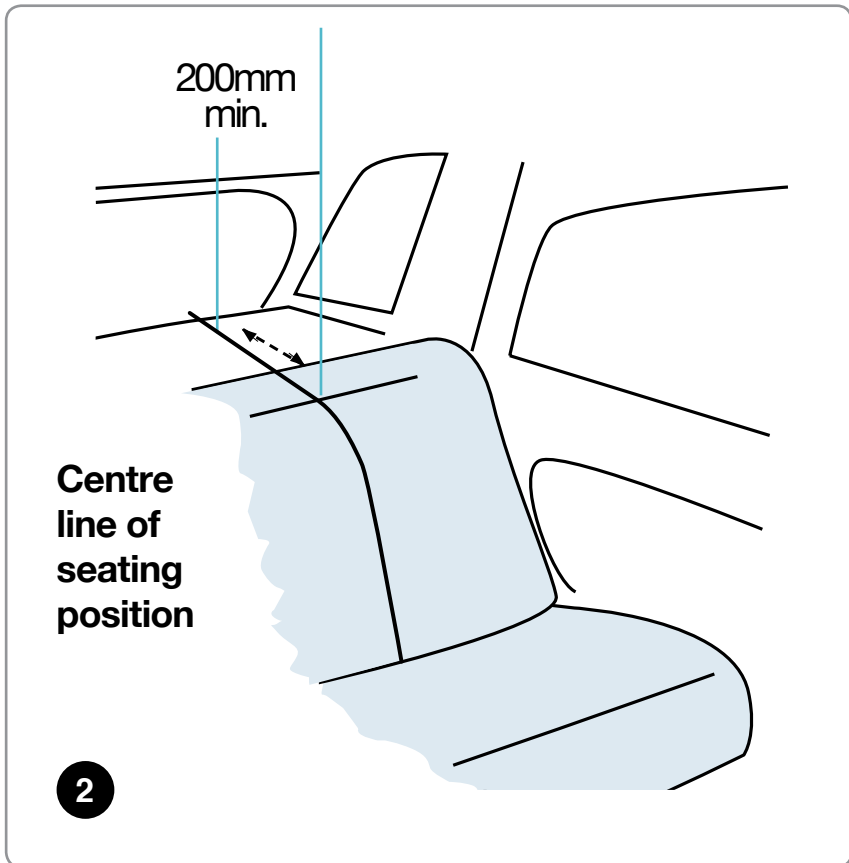



Anchorage Fitting Installation

- B. Install the anchor bolt as shown in **Figure 3**. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

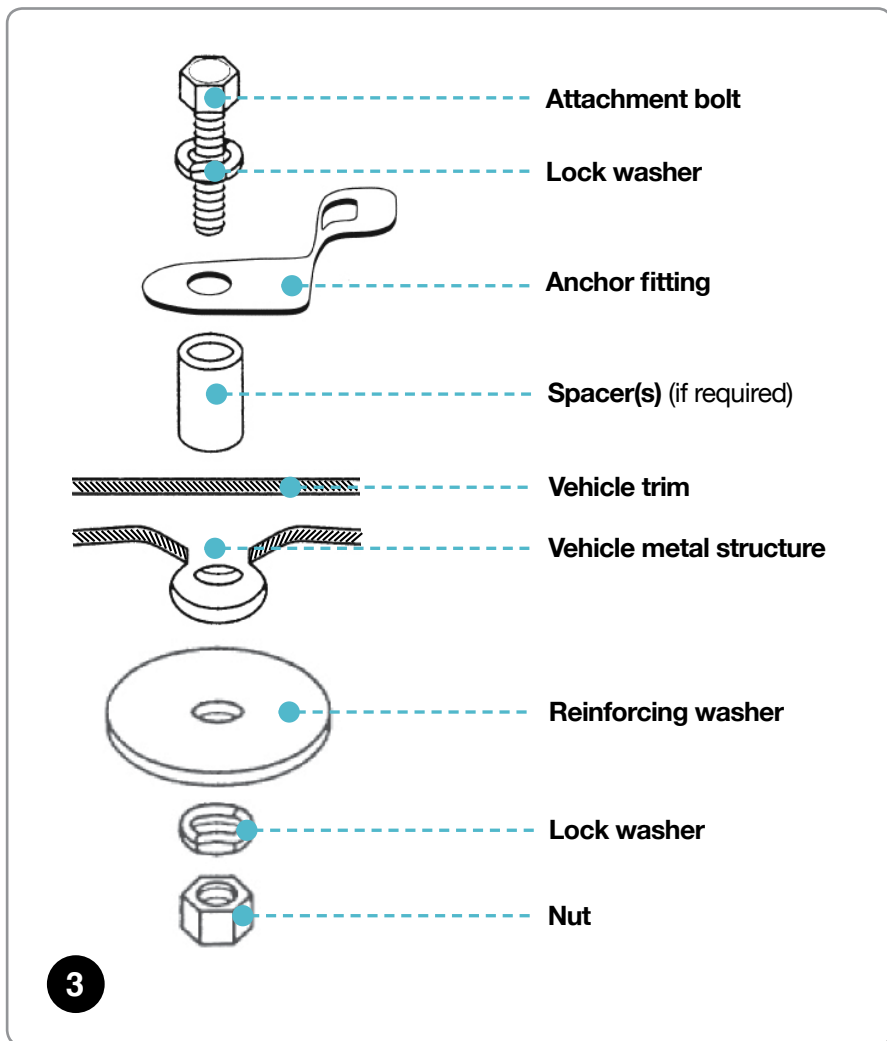

For vehicles other than sedans

In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle.

WARNINGS

CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD OR SYNTHETIC STRUCTURES. WHEN DRILLING THE 9mm HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES.

THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.



Headrest adjustment & Recline adjustment

HEADREST ADJUSTMENT






IMPORTANT:

The harness must be removed and stored in the dedicated storage compartment before being able to adjust the headrest to a higher position for booster mode. For detailed instructions, please refer from page 19 to page 22.

RECLINE ADJUSTMENT



Securing and adjusting Top Tether Strap

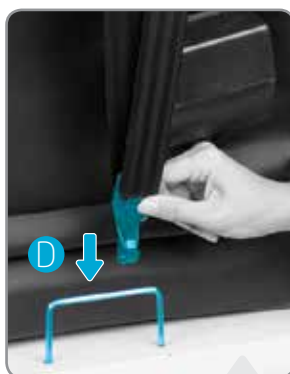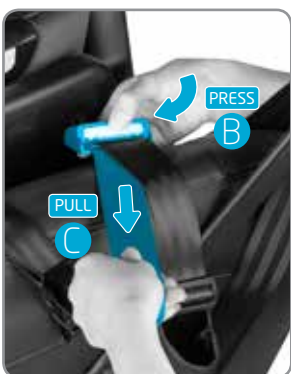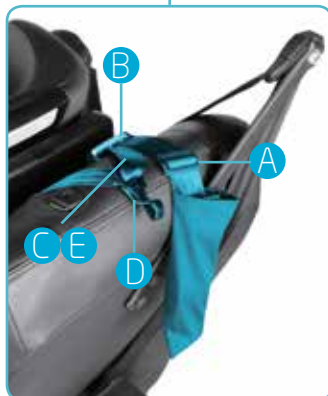

IMPORTANT:


Make sure you check for the right location of Top Tether anchorage point. Refer to page 30.



Securing and adjusting Top Tether Strap



Attach the top tether strap to the anchorage point. Place one knee on child restraint, push down firmly and tighten top anchorage strap by pulling free end of strap. Adjust until all the slack is removed.

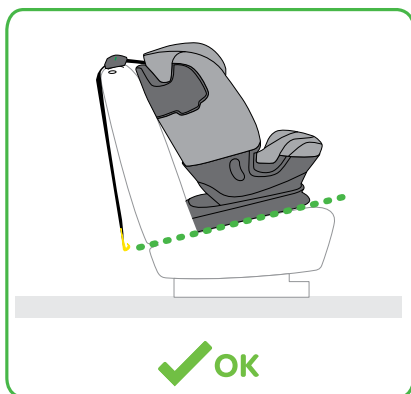

NOTE: Ensure the base of the seat is not lifted from the car seat.

Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child. Please store excess webbing in the rear pocket at the rear of the restraint.

CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.

THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.




IMPORTANT: FOLLOW THIS ADVICE

MARKER A: LOWER HEIGHT MARKER



MARKER B: MIDDLE HEIGHT MARKER

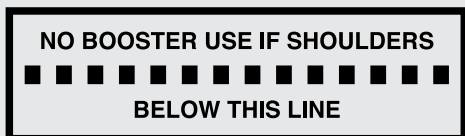

Harnessed Mode

The child's shoulders must be in-line or above this marker. If the child's shoulders are below then the child should remain in their previous child restraint.

Harnessed Mode


Convert to **Booster Mode** when the child's shoulders reach this middle height marker. If the child's shoulders are below, then continue to use the harness.

The child restraint is unsuitable for the occupant when the shoulders are below the lower marker (Marker A) or above the upper marker (Marker C, refer to **page 43**). The child needs to be moved into the next form of restraint when they reach the top shoulder height marker. For more information, refer to **page 44**.



Adjusting the harness

You MUST make these adjustments to your child restraint before you install the seat in the vehicle. Please adjust harness according to the infants shoulder height marker prior to installation.

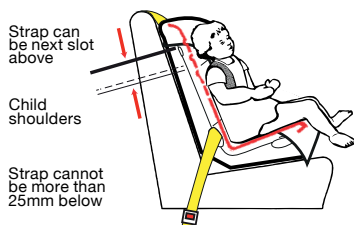


FORWARD-FACING


(6 months to 4 years, approximately)



The shoulder straps must be in the slots which are nearest to the child's shoulders, but not more than 25 mm below the child's shoulders.

B. Pull both shoulder straps simultaneously to loosen.

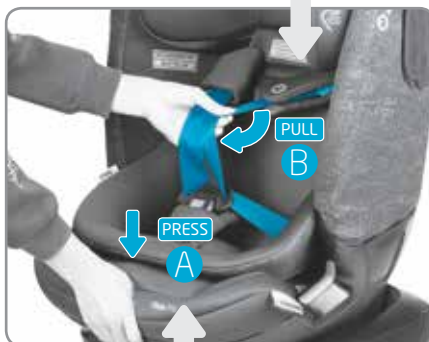

A. Place thumb or finger through cover opening and press the harness release lever at the front of seat.

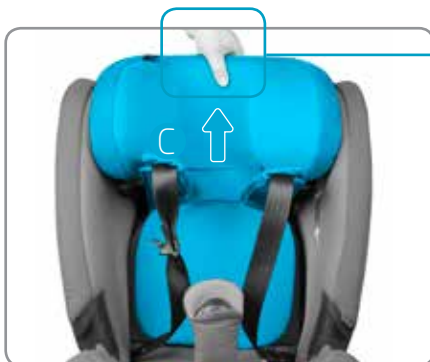


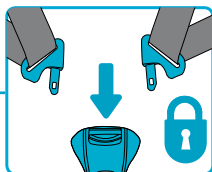
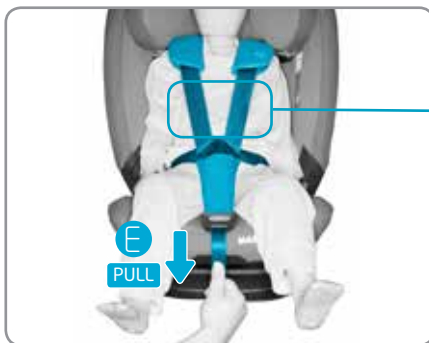


WARNINGS

- Always adjust the height of the shoulder straps as the child grows.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**



Fastening the buckle assembly

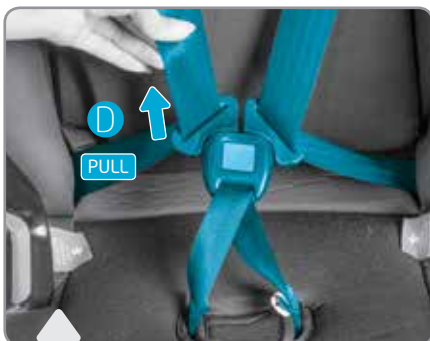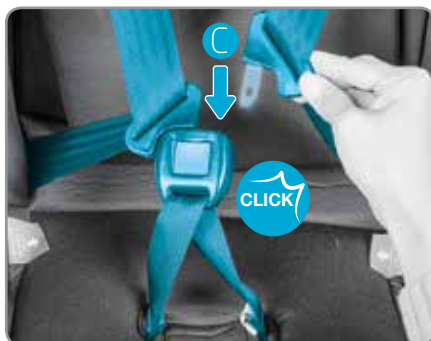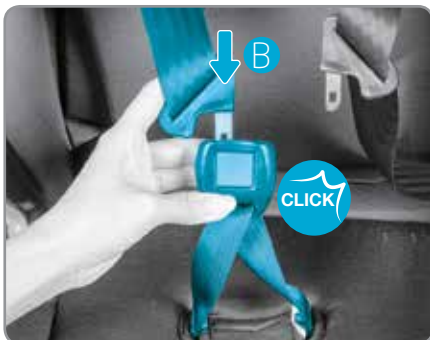

Remember to always pull up on the harness straps to make sure buckle is locked tightly.

WARNING

DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.



Convertible Booster Seat | Maxi-Cosi | 43




The next seat for your child

When your child has outgrown the seat, you can either use:


A booster seat suitable for children up to 4-10 years of age until their shoulders reach the upper height marker of the booster seat. **NOTE:** This illustration is representative only.

Or, follow the steps below to see if your child is ready to use a vehicle seat belt.

If your child is transitioning out of a booster, try this simple **three point test**. You may find that your child is not yet ready to use an adult seatbelt without the booster.

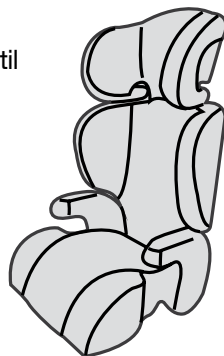


CORRECT

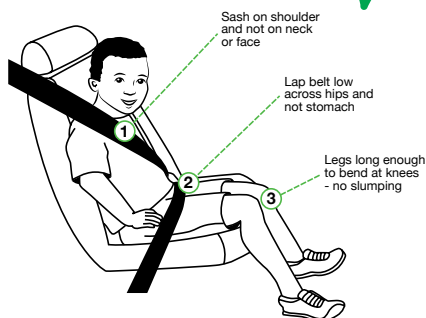

INCORRECT

Only one point is also wrong.

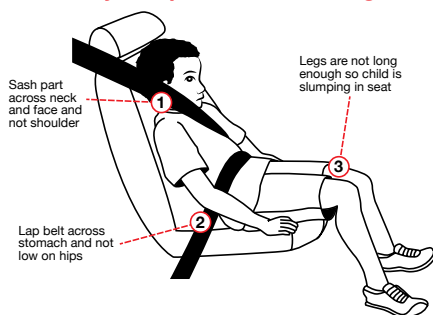

3 POINT TEST

1. Does the sash part of the seatbelt sit on the middle of the shoulder and not touch the neck or face?
2. Does the lap part of the seatbelt sit low down on the hips and not on the abdomen?
3. When you sit the child on the seat with their bottom all the way back, are their thighs long enough for their knees to bend allowing the legs to hang over the front of the seat?

If you answered “no” to any of these questions, your child needs to be in a booster seat to make both the sash and the lap part of the seatbelt fit right to ensure maximum crash protection.



Follow the manufacturer's instructions at all times.

Your child car seat is equipped with a buckle designed to give your child maximum protection during proper use. When working properly, your buckle should always fasten with an audible '**CLICK**'.

If sticky liquids (such as baby food, fruit juice, etc.) get into the buckle it may become sluggish and you will not hear a '**CLICK**'.

The buckle should be cleaned by following the steps below.


CLEANING BUCKLE:



1. You can remove the seat trim cover so it does not get wet or dirty during the cleaning process

2. Fill any shallow container with 40°C water

3. Lay the buckle gently into the container and let it soak for 30 mins

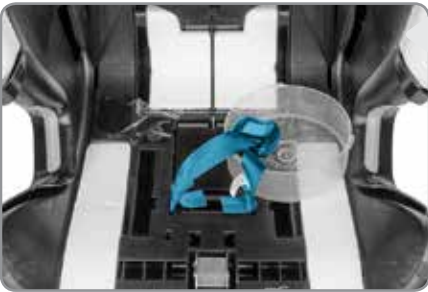

4. Simultaneously latch and unlatch the buckle tongues into the buckle several times until a strong audible **CLICK** is heard

5. If you cannot hear an audible **CLICK** then repeat steps 2 - 4 above again

6. Allow the buckle to completely dry before fitting on the trim

 
- If the buckle does not return to original working order, contact Dorel Australia Customer Service on **1300 809 526**.
- If you are a New Zealand customer, please contact IGC Dorel New Zealand Customer Service on **0800 628 000**.




Caring for the Seat Fabrics




WASHING INSTRUCTIONS



Lukewarm setting
- delicate cycle

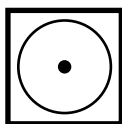

Tumble dry
10-15 minutes
on low heat

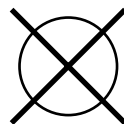

Do not dry clean





All other surfaces
should be cleaned with
a mild soap and water



Never clean with bleach
or spirit-type cleaners


- **Don't forget to remove the instruction manual**
- **Do not use the restraint without the cover**
- **Check the webbing for fraying**

Caring for the Seat Fabrics

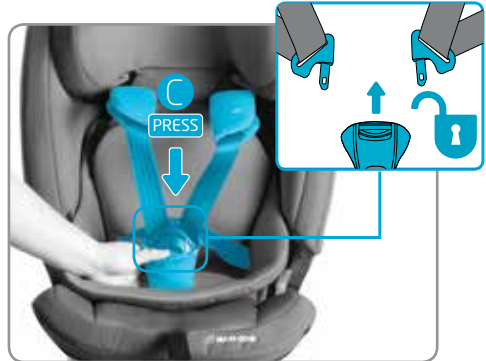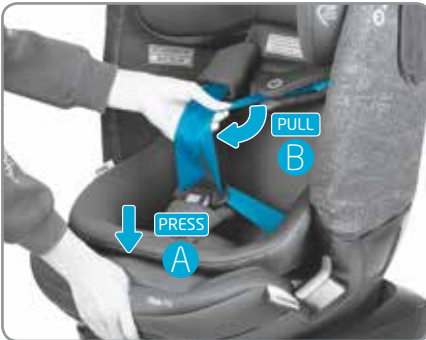



Caring for the Seat Fabrics

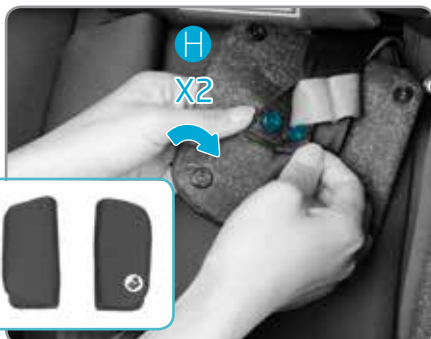



To replace the seat fabrics:

Follow the steps above in the reverse order.



Cleaning shell

- **CLEANING PLASTIC PARTS** - Sponge clean with mild soap and cool water. NEVER clean with ammonia or bleach based, or spirit-type cleaners.
- **DO NOT USE THIS SAFETY SEAT WITHOUT ITS COVER.**
- **FROM TIME TO TIME CHECK THE SEAT** for worn parts, torn material and stitching. If damage is found, DO NOT try to modify the safety seat. Replace the safety seat.
- **IMPORTANT** - Only genuine replacement parts supplied by Dorel Australia Pty Ltd can be used on the booster seat.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint) can reduce the safety provided by child restraint and may cause injury or death. For approved aftermarket accessories please refer to **page 30**.

VERY IMPORTANT: Only replace the cover with a manufacturer's supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.



Dorel Australia Pty Ltd warrants your new product to be free from defects in materials and workmanship for 10 years on the seat & 3 years on the trim, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Dorel Australia Pty Ltd will provide you with your choice of a refund, repair, or exchange (where possible) for this product if it becomes defective within the warranty period. Dorel Australia Pty Ltd will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service team on Ph: **1300 809 526** or alternatively, via our website at **www.dorel.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Consumer Service team at **655-685 Somerville Road, Sunshine West, VIC, 3020**. Hours: 8:30 am to 5:00 pm, Monday to Friday.

For New Zealand please contact Customer Service Centre, **14 Sir William Avenue, East Tamaki, Auckland, 2013**. Auckland: **(09) 2741040** NZ wide: **0800 628 000** (Toll Free). Hours: 8:00 am - 5:00 pm, Monday to Friday.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

IMPORTANT: KEEP THIS INSTRUCTION MANUAL IN THE POCKET PROVIDED WITH THE TOP TETHER.



**Australian
Standard**
AS/NZS 1754 Lic 40302
SAI Globa

Dear Customer,
Don't forget to register your product
within 3 months of purchase for
the Lifetime Warranty offer.*

Please visit to register now.

www.maxi-cosi.com.au



For Instruction Video,
please visit our website
or scan the QR code

© 2019 Dorel Australia, Pty Ltd. All Rights Reserved.
#DJC13-A 02/2019

*Terms and conditions apply.
Please visit our website to find out more.

