

CONVERTIBLE CAR SEAT

Suitable from newborn until 4 years (approximately).



Images and designs
may vary



IMPORTANT: KEEP THIS BOOKLET IN THE PLACE PROVIDED ON THE CHILD RESTRAINT.

This instruction manual applies to both GCELL and Non-GCELL models.

Quick Start Installation

Rearward-facing using seatbelt (Newborn to 30 months approximately)



NOTE: These images are for reference and illustration purposes only. We recommend the use of the stabilising bar cover and the seat mat when installing this product (if fitted).

Quick Start Installation


Forward-facing using seatbelt (12 months to 4 years approximately)



SELECT:
'LOW'
'MID'
'HIGH'





← Front of vehicle

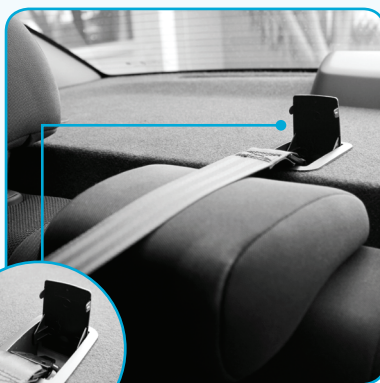

NOTE: These images are for reference and illustration purposes only. We recommend the use of the stabilising bar cover and the seat mat when installing this product (if fitted).

Quick Start Installation

Rearward-facing using ISOGO (Newborn to 30 months approximately)

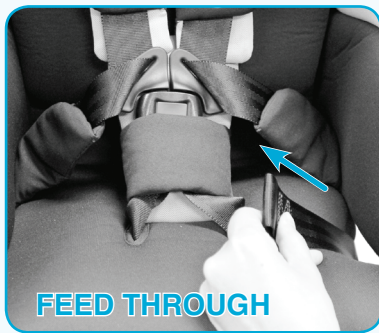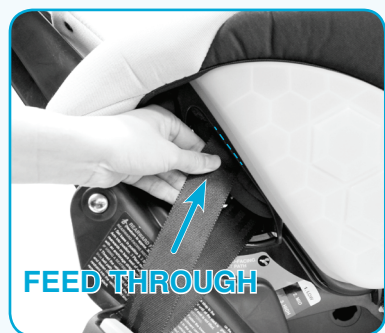


NOTE: These images are for reference and illustration purposes only. We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).

Quick Start Installation

Rearward-facing using ISOfix (Newborn to 30 months approximately)




Attach top tether strap

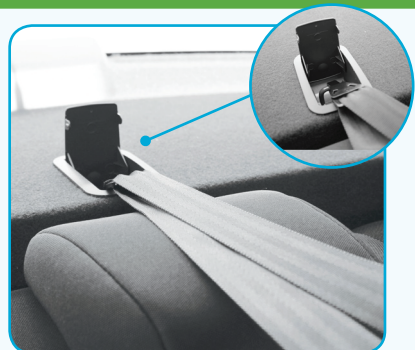

Quick Start Installation

Forward-facing using ISOGO (12 months to 4 years approximately)

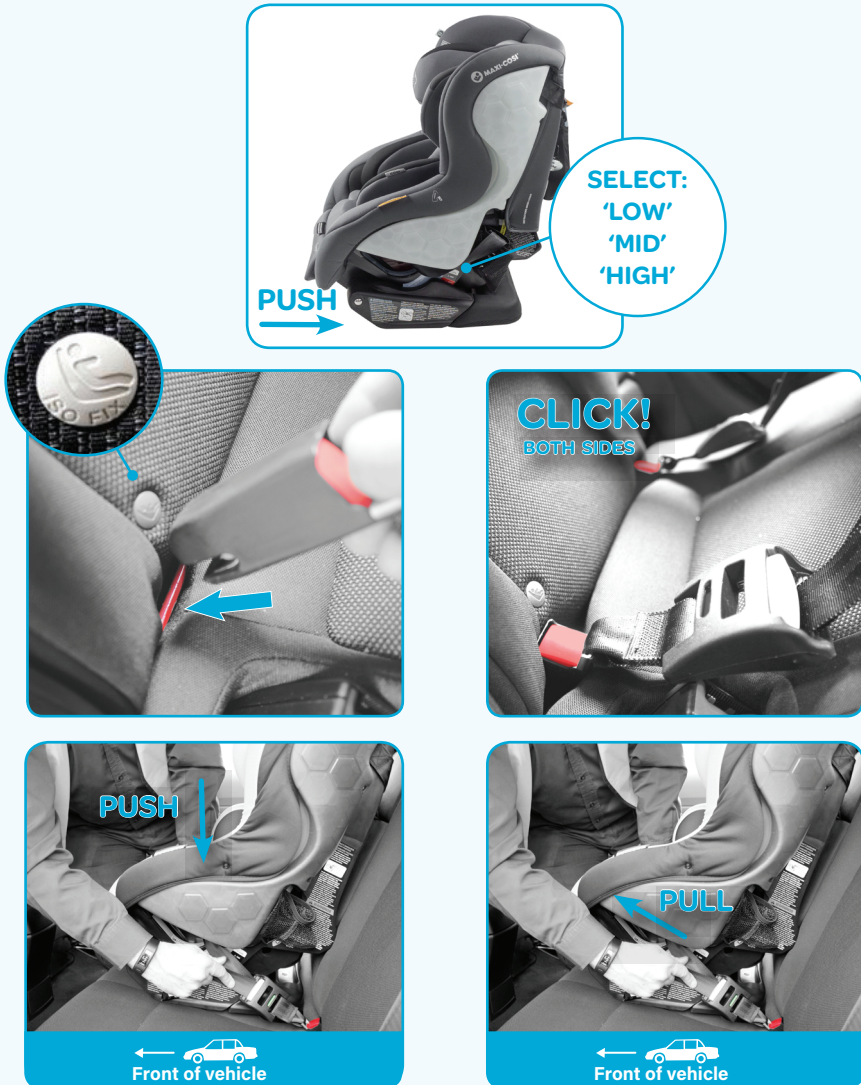

NOTE: These images are for reference and illustration purposes only. We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).

Quick Start Installation



tip: Always check for **GREEN**
at eye level

Attach top tether strap

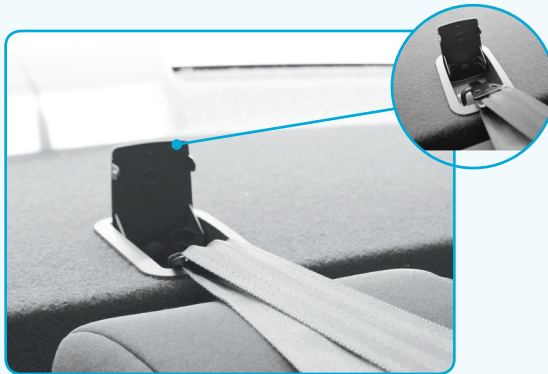


Table of Contents

Quick start installation	2
Warranty information	9
Warnings	10
Vehicle information	13
Seat to vehicle positioning	13
Location of anchor positioning	15
Anchorage fitment check	16
Upper anchorage installation	17
Angle configuration for the seat	19
Component list	20
Operation and adjustment	22
Shoulder height markers	22
Preparing harness for child fitment	24
Headrest and harness height adjustment	25
Recline adjustment	25
Fastening the buckle assembly	26
Top tether adjustment	27
Installation	28
Rearward-facing installation with vehicle belts	28
Forward-facing installation with vehicle belts	29
Rearward-facing installation using ISOGO	30
Forward-facing installation using ISOGO	32
Next seat for your child	34
Care and maintenance	35
Cleaning the buckle	35
Removing the seat cover for cleaning	36
Notes	38
Guarantee	39



MAXI-COSI®

We carry the future

CONVERTIBLE CAR SEAT

Dear Customer,

Congratulations on the purchase of your brand new Maxi-Cosi car seat, we hope you and your little one will have plenty of hours of fun together!

Our car seats are so good, we've put them under a Lifetime Warranty - so you can enjoy them for years to come. Don't forget to register within three months after purchase.

In the event of a car accident, your Maxi-Cosi child restraint may have unseen damage from crash forces. The Maxi-Cosi Accident Exchange Service offers new for old Maxi-Cosi child restraint replacement in the event of a serious accident (where a police report is required), giving you peace of mind knowing your child is correctly protected.

Need assistance?

Call our Customer Service Centre:
1300 809 526

Monday to Friday
(8:30am-5:00pm AEST)

or send an email:
customerservice@dorel.com.au



WARNINGS

Read and follow all of the installation instructions for maximum protection. If you have any questions regarding the installation or use of this restraint, please contact Dorel Australia or agent, or a child restraint fitting station authorised by the relevant transport authority, or in New Zealand, to consult the agent for the vehicle.

- To be used only in a rearward-facing position until the infant's shoulders reach the lower shoulder height marker (approximately 12 months of age) or reach the middle height marker (approximately 2 to 3 years of age). Then to be used in a forward-facing position until the child's shoulders reach the upper shoulder height marker (approximately 4 years of age).
- Continue to use this child restraint until the child reaches this limit.
- Do not use forward facing until child's shoulders are above the lower shoulder height marker.
- Infants are at risk of serious injury if they face forward too early.
- Children are at risk of serious injury if they move to booster seats too early.
- Children who have outgrown this restraint are safest in a larger child restraint with an in-built harness or a booster seat until their shoulders reach the upper shoulder height marker of the restraint.

GENERAL

- Use the restraint exactly as shown in the instructions.
- Supervision of children is needed because they may be able to undo the buckles.
- **DO NOT LEAVE CHILDREN UNATTENDED IN THE CAR.**
- Do not alter or modify this restraint.
- Repairs must only be done by the manufacturers or agent.
- Do not allow the restraint to come into contact with polishes, oils, bleach and other chemicals.
- Destroy the restraint if it has been in a severe crash, even if no damage is visible.
- **DO NOT USE THIS RESTRAINT WITHOUT THE COVER.**
- To ensure infant's back is evenly supported, do not put more than one nappy on the baby and make sure the nappy is not thickly folded at the back.

WARNINGS

- DO NOT USE A REAR- FACING CHILD RESTRAINT WHERE AN AIRBAG IS FITTED IN FRONT OF THE SEATING POSITION.
- Fit the restraint firmly to the car seat.
- Fit the harness firmly to the child.
- A loose restraint or harness is dangerous.
- Do not harness an infant wrapped in a blanket or swaddled. Any blanket or wrap must only be placed over the harness and infant.
- Seatbelt extenders are not recommended to be used if the seatbelt is not long enough to secure the child restraint. If seatbelts are too short then advice should be sought from a child restraint fitter and their recommendation be considered before using a seatbelt extender.
- Always secure the loose end of the top tether strap. Do not use the child restraint where this strap may fall into a split in the seat back or off the side of the seat.
- Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.
- ALWAYS ATTACH HOOK AND REMOVE SLACK.
- THIS RESTRAINT IS NOT SUITABLE FOR USE WHERE THE TOP TETHER STRAP MAY FALL INTO A SPLIT IN THE SEAT BACK OR OFF THE SIDE OF THE SEAT.
- THIS RESTRAINT MUST BE ATTACHED TO A CHILD RESTRAINT UPPER ANCHORAGE POINT IN THE CAR. REFER TO CAR OWNER'S HANDBOOK FOR LOCATION OF UPPER ANCHORAGE POINTS. REFER TO A CHILD RESTRAINT FITTING STATION IF NO UPPER ANCHORAGE POINTS ARE IN THE MOTOR CAR.
- Always check the measurements between the front of the seat back of the rear seat and all front seats in the car in which the child restraint is intended to be used, to ensure that the space is sufficient.
- Care and attention be given to ventilation and shading of the occupant.
- TO BE USED WITH A LAP-SASH/LAP-ONLY SEATBELT OR ISOFIX LOW ANCHORAGES IN THE FRONT/BACK OF MOST CARS WITH FORWARD FACING SEATS.



WARNINGS

- The use of child restraints in the front seat may be restricted for children of specific ages by local legislation. Please check with your local legislation regarding any restriction for child restraint. If a car has two or more rows of seats, children under four must not travel in the front seat. If all seats, other than the front seats, are being used by children under seven years, children aged between four and six years (inclusive) may travel in the front seat, provided they use an approved child restraint or booster seat.
- Use of aftermarket accessories (i.e. items not provided in the box with the child restraint), can reduce the safety provided by child restraint and may cause injury or death. For approved aftermarket accessories please refer to **page 15**.
- Please contact Dorel Australia Customer Service with any questions or concerns.

Vehicle information


Seat to vehicle positioning

Some seating positions in your vehicle may **NOT** be safe for this safety seat. Some vehicles do not have any seating positions that can be used safely with the seat.

If you are not sure where to place the infant seat in your vehicle, consult your vehicle's owner's handbook.

Vehicle Seat Location Requirements

Children are safer when properly restrained in rear vehicle seating positions. Whenever possible, secure the infant seat in the centre position of the seat directly behind the front seats.

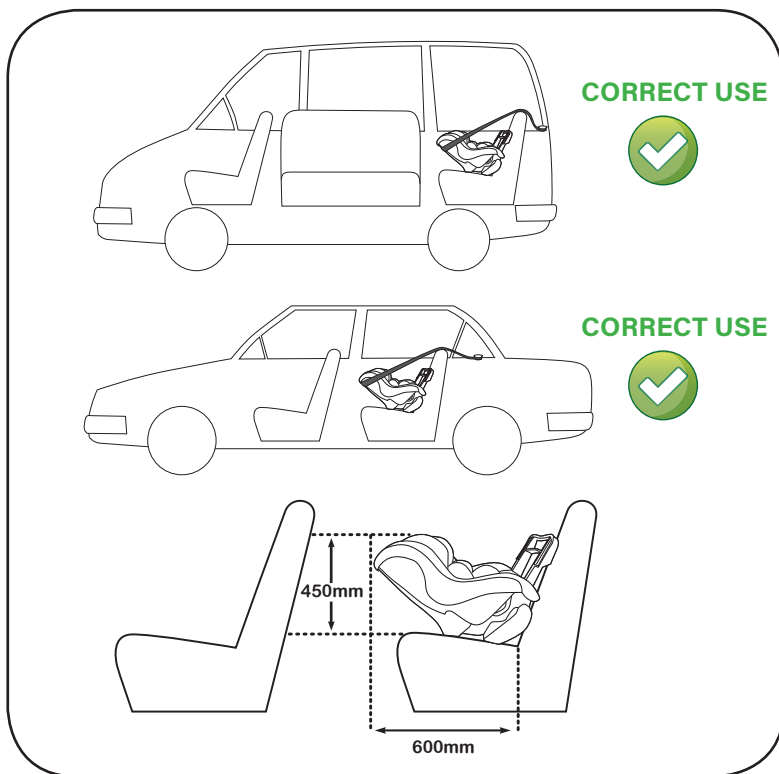


WARNING

- **IMPROPER PLACEMENT OF THE SAFETY SEAT INCREASES THE RISK OF SERIOUS INJURY OR DEATH.**


Vehicle information

Seat to vehicle positioning


CORRECT USE

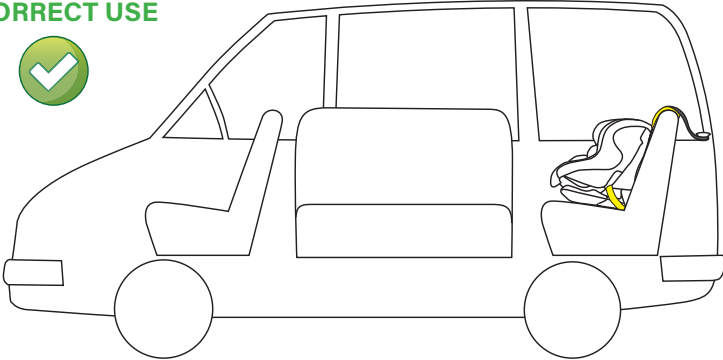

CORRECT USE

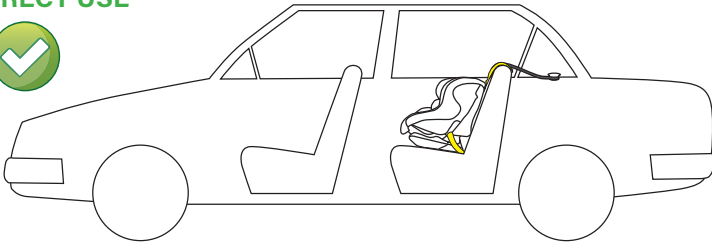


INCORRECT USE

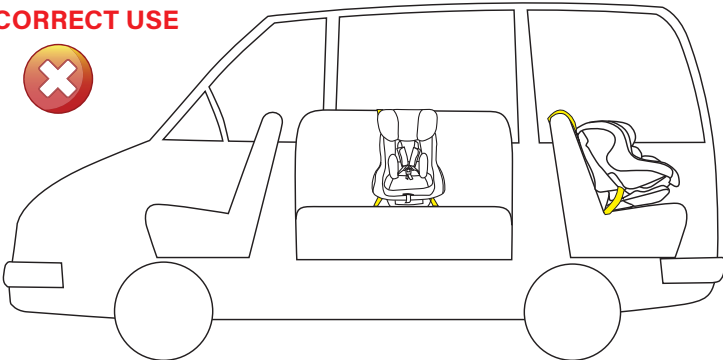

Vehicle information

Location of anchor fitting

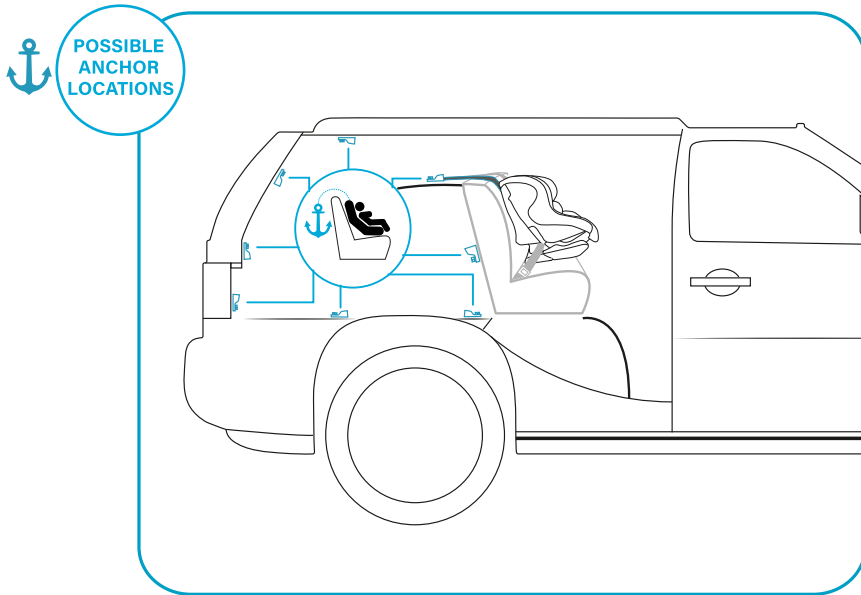

- The anchor point can be found in different locations in different cars. The diagram above shows possible locations of anchor points. Sometimes it is on the parcel shelf in sedans, and on the floor area in station wagons, vans and hatchbacks. Make sure that you do not confuse the luggage hook in the back of a station wagon with anchor points. Refer to your owner's manual.
- An extension strap may be needed for vehicles without a fixed parcel shelf. Extension straps and extra fittings are available from various stores.

Extension straps 300mm ref no. 019865

Extension straps 600mm ref no. 019866

Anchor bolt kit ref no. 014354

Locking clip ref no. 014401

Vehicle information

Anchorage fitment check





Child restraints must be used correctly to provide proper protection for your child. The anchorage system on child restraints must be used in the correct way.

CORRECT

Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.


INCORRECT

The clip must not lie flat on the anchorage fitting.

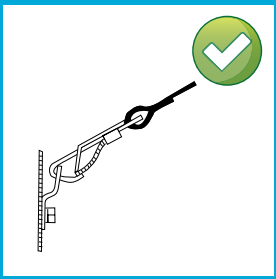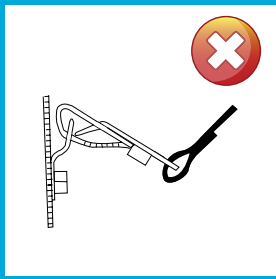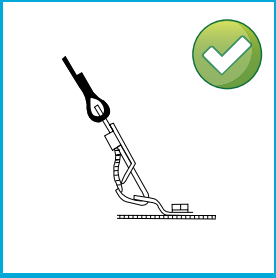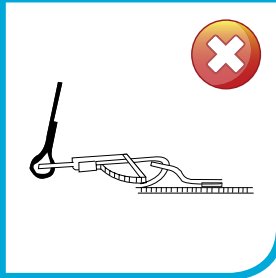INSTALLATION	CORRECT	INCORRECT
	Make sure there is no slack in the top strap and the attachment clip is upright in the anchorage fitting.	The clip must not lie flat on the anchorage fitting.
FIGURE 1 Anchorage in vertical panel at rear of vehicle		
FIGURE 2 Floor mounted anchorages		

Vehicle information

Upper anchorage installation

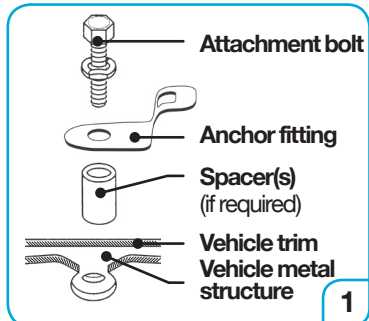


FOR CARS FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT:

Locate the upper anchorage point behind the rear seating position (consult the car owner's handbook for the location of the upper anchorage point).

Remove the thread plug from the parcel shelf/floor/roof and install the attachment bolt as shown in Figure 1.


CAUTION: DO NOT OVERTIGHTEN THE ATTACHMENT BOLT. OVERTIGHTENING MAY FRACTURE OR BREAK BOLT. MAXIMUM TORQUE IS 20 Nm.

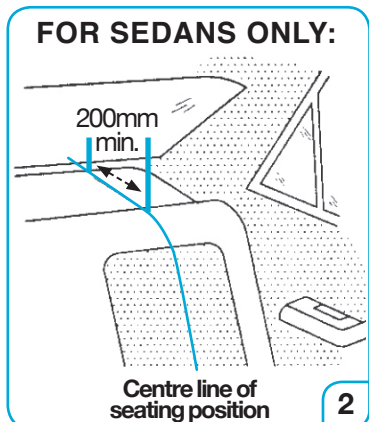

FOR CARS NOT FITTED WITH A CHILD RESTRAINT UPPER ANCHORAGE POINT:

For sedans only:

Drill a 9mm diameter hole in the parcel shelf on the centre-line of the seating position as shown in Figure 2. Install the anchor bolt as shown in Figure 3. It is recommended that this installation be carried out by a child restraint fitting station or licenced motor mechanic.

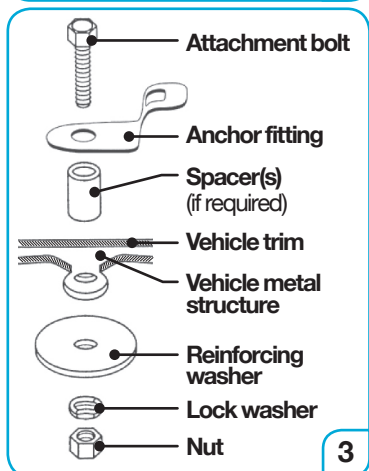

For vehicles other than sedans:

In Australia, consult your nearest child restraint fitting station or traffic authority for vehicle inspection to find the best, correct position for the placement of the upper anchorage point, and for the correct attachment bolt length and use of spacers. In New Zealand, consult the agent for the vehicle.



WARNINGS


- **CHILD RESTRAINTS MUST NOT BE ATTACHED TO UNSOUND METAL OR TO WOOD OR SYNTHETIC STRUCTURES. WHEN DRILLING THE 9mm HOLE DO NOT DRILL THROUGH FUEL LINES, FUEL TANKS, ELECTRICAL WIRING, OR RADIO SPEAKERS. WEBBING STRAPS MUST BE PROTECTED FROM SHARP CORNERS AND EDGES.**
- **THE ANCHOR FITTING MUST BE USED ONLY AS DESCRIBED ABOVE. IT MUST NOT BE HOOKED ONTO ANY OTHER OBJECT.**

Check Before Installation

Angle configuration for the seat

All vehicle seats are different which may position the child restraint too upright or reclined for the child's comfort. The diagram below indicates the recommended installation angle range of child restraints specific to this manual. The child restraint's backrest angle should not exceed 43° or fall below 26° (measured from the horizontal plane) when installed.

If in some rare instances you are unable to meet the installation recommendations as described above, please consult with a Professional Child Restraint Installation Specialist.

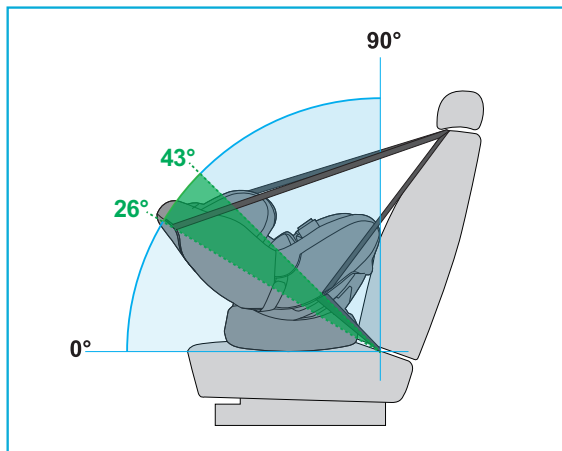

Note: These recommendations are specific only to the child restraint model(s) referenced in this instruction manual. Please check your specific manual closely for installation recommendations for alternative restraints.

WARNINGS

- **DO NOT** install convertible child restraints excessively reclined, ensure the angle is no greater than 43° .
- **DO NOT** adjust harness or tether strap hardware such that it sits too close to the occupant.
- Ensure that correct seatbelt path is used and that the restraint is installed in the correct direction for rearward facing application. Refer to page 28.
- **DO NOT** wrap baby in a blanket or swaddled as infant can be ejected and killed in an accident.
- Ensure the harness fits the baby firmly.
- Ensure that any blanket or other covering may only be placed over the harness after the harness is adjusted firmly.
- The infant's legs are not be bound or wrapped together and the arms are not bound or wrapped together.

Components list



NOTE: These images are for reference purposes only.

- | | |
|--|-----------------------------|
| 1. Air protect cell (x2) | 8. Buckle |
| 2. Height markers (x3) | 9. GCELL (x2 if fitted) |
| 3. Stabilising arm | 10. Belt mates (x2) |
| 4. Harness release lever
(under flap) | 11. Base |
| 5. Base adjustment button
(three positions) | 12. Headrest adjusters (x2) |
| 6. Harness tightening strap | 13. Adjustable headrest |
| 7. Infant insert | |

Components list



NOTE: These images are for reference purposes only.

- | | |
|---|--|
| 14. Splitter plate | 18. Top tether strap adjuster |
| 15. Top tether strap | 19. Tension indicator (x2 in mesh pocket) |
| 16. Anchor kit | 20. ISOGO lower connectors (x2 in mesh pocket) |
| 17. Storage pocket
(instruction manual & excess
tether strap webbing) | 21. Rearward facing belt path |
| | 22. Forward facing belt path |

Operation and adjustment

Shoulder height markers



A. Upper height marker




Forward-Facing

- For toddler use up to approx 4 years old or when the child's shoulders reach the shoulder height marker at which point you must move to the next car seat.

NOTE: You can turn the restraint from rearward-facing to forward-facing anytime once your child's shoulders reach the lower height marker.

B. Middle height marker

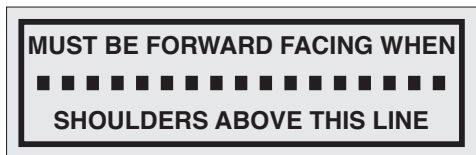

Rearward-Facing

For toddler use up to approx 30 months old or when the child's shoulders reach the shoulder height marker at which point you must turn the seat forward-facing

C. Lower height marker



Rearward-Facing

Newborn up to approx 12 months or till the child's shoulders reach the height marker at which point you can continue to use rearwardfacing till the middle height marker or turn the car seat forward-facing.



WARNINGS

- Continue to use this child restraint until the child reaches this limit.
- Do not use forward facing until child's shoulders are above the lower shoulder height marker.
- Infants are at risk of serious injury if they face forward too early.
- Children are at risk of serious injury if they move to booster seats too early.
- Children who have outgrown this restraint are safest in a larger child restraint with an in-built harness or a booster seat until their shoulders reach the upper shoulder height marker of the restraint.
- The child restraint is unsuitable for the occupant when the shoulders are above the upper marker. The child needs to be moved into the next form of child restraint (booster seat) when they reach the top shoulder height marker.


NOTE :

- **If the baby's neck muscles are unable to support their head, then the child should remain rear facing.**

Operation and adjustment

Preparing harness for child fitment

You **MUST** make these adjustments with your child before you install the child restraint in the vehicle. Please adjust harness according to the infant's shoulder height prior to installation.

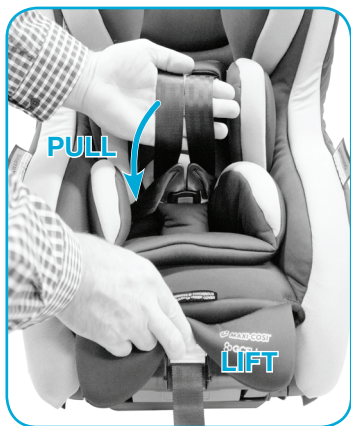

Configuring the harness straps for correct child fitment:

1. Lift the harness release lever at the front of seat.
2. Pull the shoulder strap to loosen.
3. Press red button to release buckle assembly for ease of child fitment. Pull harness straps over sides of infant seat. Place child in seat.


IMPORTANT: Always ensure that the harness adjuster is free from any obstructions to avoid harness straps loosening.



REARWARD-FACING

(newborn to approximately 30 months)


The shoulder straps must be in the slots which are nearest to the child's shoulders, but not lower than the child's shoulders.

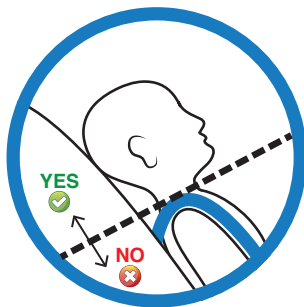

FORWARD-FACING

(12 months to 4 years)


The shoulder straps must be in the slots which are nearest to the child's shoulders, but not more than 25 mm below the child's shoulders.

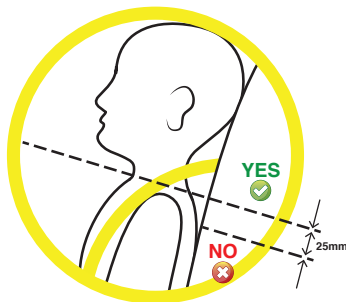

Operation and adjustment

Headrest and harness height adjustment

Adjust headrest height:

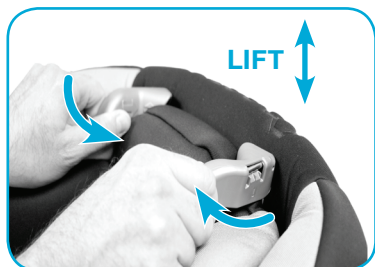

1. Rotate harness height adjustment levers inward to release. Move headrest to the proper height and let go to lock into place.
2. Fasten buckle assembly (see **Page 26**). Pull the adjuster belt at the front of the seat until the harness belt lies firmly against the child.

Using harness holder:



1. Loosen the harness.
2. Place buckle tongue clips onto magnet, symbolised by harness clip image (as shown to the left).

Recline adjustment



1. Push **RED** button in to activate base recline adjustment.
2. Select the desired recline position 'Low', 'Mid', or 'High'.



WARNINGS


- Always adjust the height of the shoulder straps as the child grows.
- Failure to fasten and tighten the harness system correctly can result in serious injury or death.

Operation and adjustment

Fastening the buckle assembly




1. To **RELEASE** the buckle, press the red button.

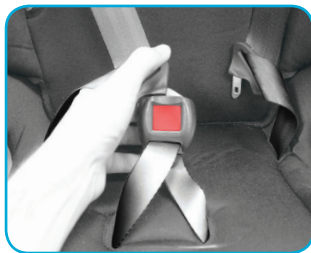

2. To **FASTEN** the buckle, insert one buckle tongue as shown above (you will not hear a click).



3. Insert the second buckle tongue as illustrated above. Now listen for a '**CLICK**'.

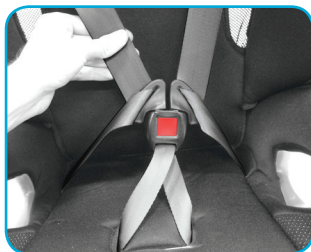

4. Remember to always pull up on the harness straps to make sure buckle is locked tightly.




WARNING

- **DO NOT LEAVE CHILDREN UNATTENDED IN THE VEHICLE.**


Operation and adjustment

Top tether adjustment

TO LOOSEN:

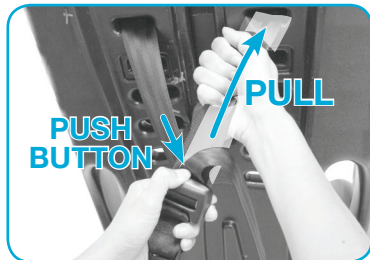

TO TIGHTEN:

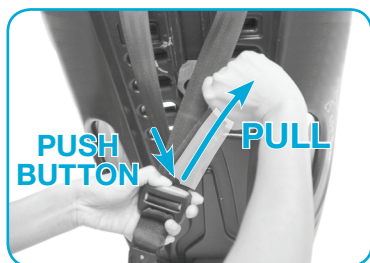

Adjusting top tether strap:

To loosen:

Press on the adjuster button with thumb and pull the strap back through to loosen top tether strap using strap which is attached to the seat.

To tighten:

Adjust top tether strap and remove slack. Pull loose end of strap to tighten.

NOTE: Store the excess webbing in the pocket provided at the back of the child restraint. These images are for reference and illustration purposes only.

WARNINGS

- **CAUTION: CHILDREN CAN BE INJURED OR RESTRAINTS AND TOP TETHER STRAP DAMAGED BY UNSECURED CARGO IN A COLLISION. SECURE OR REMOVE HAZARDOUS CARGO BEFORE USING THIS CHILD RESTRAINT.**
- **Always secure the loose end of the top tether strap to prevent it hanging out of the car or being accessible by the child.**
- **When not in use, fold hanging tether strap and place in storage pocket provided.**

Installation

Rearward-facing installation with vehicle belts

1. Start by loosening full length of the top tether.
2. Set base in position 3 (High).
3. Swing stabilising arm into position.
4. Place restraint facing rearwards on back seat of vehicle in line with a top tether strap anchorage point.
5. Thread the vehicle seat belt through the **BLUE** belt path at the bottom of the restraint and fasten buckle.
6. Press the child restraint firmly down into the vehicle seat and remove belt slack.
7. Attach the top tether strap to the anchorage point. Adjust until all the slack is removed. Ensure Base of seat is not lifted.



NOTE: These images are for reference and illustration purposes only. We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).

NOTE: There is an option to install seat using seat belt with accessory locking clip. Please see instructions provided with locking clip for installation.



WARNING

- **DO NOT LEAVE CHILDREN UNATTENDED IN THE VEHICLE.**

Installation

Forward-facing installation with vehicle belts

NOTE: Before you start installation, adjust the shoulder straps and headrest to fit your child. Refer to **page 24/25**.

1. Adjust the child restraint to the forward facing position and select desired seat angle by adjusting the base to ('LOW', 'MID' or 'HIGH').
2. Place restraint on back seat of vehicle in line with a top tether strap anchorage point.
3. Thread the vehicle seat belt through the back of the seat though the **YELLOW** forward-facing belt path.
4. Place one hand on seat and firmly press the child restraint down into the vehicle seat and pull on seatbelt to remove slack.
5. Attach the top tether strap to the anchorage point. Adjust until all the slack is removed. Ensure Base of seat is not lifted.



NOTE: If the car seatbelt is not long enough to secure the child restraint, **DO NOT USE SEAT BELT EXTENDERS**.



NOTE: These images are for reference and illustration purposes only. **We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).**

NOTE: There is an option to install seat using seat belt with accessory locking clip. Please see instructions provided with locking clip for installation.

Rearward-facing using ISOGO

(Newborn to 30 months approximately)

1. Set seat angle to "HIGH"

Push the red button, located on the front of the base inwards and set seat angle to 'HIGH'.

Swing stabilising bar up into position.




2. Attaching ISOGO lower connectors

Release belt to full length by pressing grey button and pulling adjuster. Repeat for both sides.

Locate low anchorage points. You can find this by looking for the ISOFIX logo located on the vehicle seat.

Attach the lower connector on both sides. Listen for a "click!"

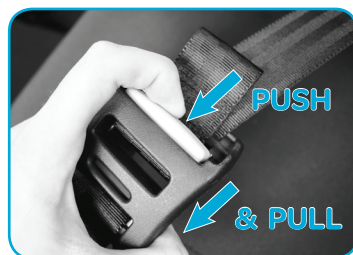

NOTE: You can move the car seat out of the way to locate and attach the connectors, then place back into position before tightening.

NOTE: These images are for reference and illustration purposes only. **We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).**

Installation

3. Tighten the connector straps

Start with the strap on the inside closest to the centre and remove as much slack out as possible.


Feed the free end of ISOGO strap through the side trim opening.

Firmly push child restraint down into the vehicle seat whilst pulling on the ISOGO straps.

Alternate removing the slack from side to side until you get a firm fitment and achieve a **GREEN** indication.

Ensure to pull the free end of the ISOGO strap out after tightening complete.


NOTE: Always check for **GREEN** at eye level.

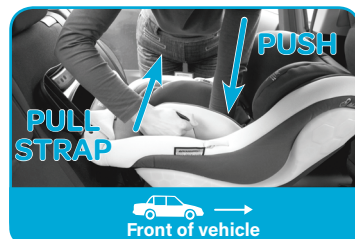

4. Attach top tether strap

Attach the top tether strap to the top anchorage point in the vehicle.

Ensure there are no twists in the belt, and adjust until all slack is removed from top tether.

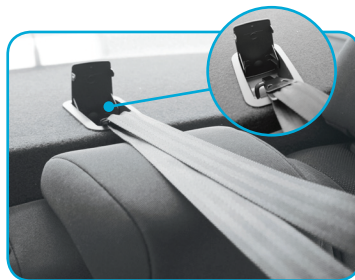

IMPORTANT:

Do not attach the lower attachment connectors of two separate child restraints to the same ISOFIX low anchorages in your car.

Always attach the top tether strap to the child restraint upper anchorage in your car. Refer to your owner's manual.

Child restraint lower attachment connectors and the ISOFIX low anchorages in your car are designed to withstand only those loads imposed by a correctly fitted child restraint.

Forward-facing using ISOGO

(12 months to 4 years approximately)

1. Select the desired seat angle

Push the red button, located on the front of the base, inwards to select the desired seat angle: 'LOW', 'MID' or 'HIGH'.

Place the car seat in the vehicle, facing forward.




2. Attaching ISOGO lower connectors

Release belt to full length by pressing grey button and pulling adjuster. Repeat for both sides.

Locate low anchorage points. You can find this by looking for the ISOFIX logo located on the vehicle seat.

Attach the lower connector on both sides. Listen for a "click!"

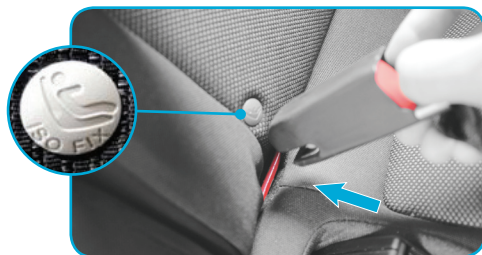

NOTE: These images are for reference and illustration purposes only. We recommend the use of the provided stabilising bar cover and the seat mat when installing this product (if fitted).

NOTE: You can move the car seat out of the way to locate and attach the connectors, then place back into position before tightening.


Installation

3. Tighten the connector straps


Start with the strap on the inside closest to the centre and remove as much slack out as possible, then move to the outside strap and remove as much slack as possible.

Firmly push child restraint down into the vehicle seat whilst pulling on the ISOGO straps.

Alternate removing the slack from side to side until you get a firm fitment and achieve a **GREEN** indication.

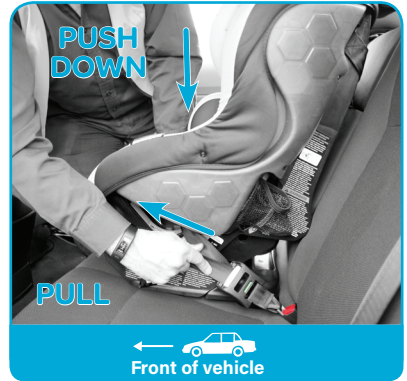

NOTE: Always check for **GREEN** at eye level.

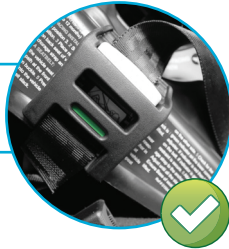

4. Attach top tether strap

Attach the top tether strap to the top anchorage point in the vehicle.

Ensure there are no twists in the belt, and adjust until all slack is removed from top tether.




IMPORTANT:

Do not attach the lower attachment connectors of two separate child restraints to the same ISOFIX low anchorages in your car.

Always attach the top tether strap to the child restraint upper anchorage in your car. Refer to your owner's manual.

Child restraint lower attachment connectors and the ISOFIX low anchorages in your car are designed to withstand only those loads imposed by a correctly fitted child restraint.

Next seat for your child

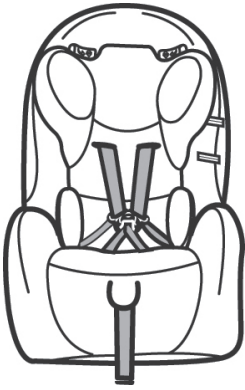

Option 1: Harnessed forward-facing car seat

To be used only in a forward-facing position by a child whose shoulders are above the lower shoulder height marker (approximately 6 months of age) until the child's shoulders reach the upper shoulder height marker (approximately 8 years of age).



Option 2: Booster seat

To be used with a lap-sash seatbelt by a child whose shoulders are above the lower shoulder height marker (approximately 4 years of age) until the child's shoulders reach the upper shoulder height marker (approximately 6 to 8 years of age). Can also be used with child harness that is approved for use with this booster seat.




Option 3: Larger booster seat

To be used with a lap-sash seatbelt by a child whose shoulders are above the lower shoulder height marker (approximately 4 years of age) until the child's shoulders reach the upper shoulder height marker (approximately 8 to 10 years of age). Can also be used with child harness that is approved for use with this booster seat.

for more information, visit
www.maxi-cosi.com.au


Care and maintenance

Cleaning the buckle

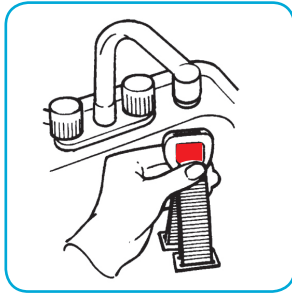

Follow the manufacturer's instructions at all times. Before removal, ensure you have carefully noted the way which the various parts are attached to the seat so as to facilitate reassembly.


Your child car seat is equipped with a buckle designed to give your child maximum protection during proper use. When working properly, your buckle should always fasten with an audible '**CLICK**'.

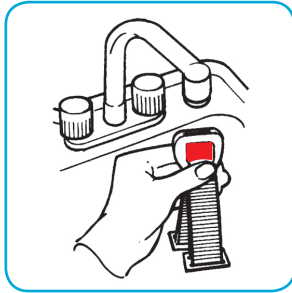

If sticky liquids (such as baby food, fruit juice, etc.) get into the buckle it may become sluggish and you will not hear a '**CLICK**'.

The buckle should be cleaned by following the steps below.

1. Fold seat cover and foam back from buckle. Using a flat edged screwdriver gently lift one end of rod out releasing crotch buckle, repeat for other side.
2. As illustrated, place the buckle unit under running water (40 degrees Celsius). Let the water flow through the mouth of the buckle for one minute.
3. Simultaneously, latch and unlatch the tongues into the buckle several times until a strong audible click is heard.
4. If you still cannot hear a strong audible click after latching the buckle several times. Repeat steps 2 and 3.
5. **DO NOT** oil any part of the buckle.

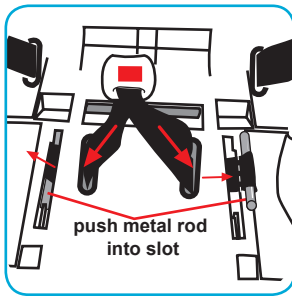


6. Allow buckle to dry.
7. Refit crotch buckle ensuring **RED** button is facing out.
8. Thread the webbings as shown with arrows.
9. Put the 2 metal rods back into the webbing loops and push into the slots.
10. Pull the buckle to make sure that it is fitted properly.
11. If the buckle does not return to original working order, contact Dorel Australia Customer Service on **1300 809 526**.

Care and maintenance

Removing the seat cover for cleaning

- Seat trim may be removed for cleaning. Don't forget to remove the instruction manual.
- Tumble dry 10-15 minutes on low heat.
- Do not dry clean.
- All other surfaces should be cleaned with a mild soap and water.
- Never clean with bleach or spirit-type cleaners.
- Do not use the restraint without the cover.
- Check the webbing for fraying.

Remove trim for cleaning

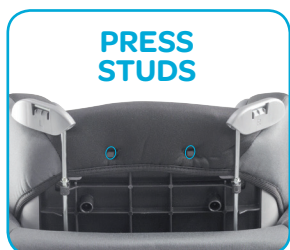

To remove headrest trim:


1. Move headrest to highest position.
2. Detach the bottom holes from the plastic studs on the back of the headrest.
3. Peel the trim off the headrest.
4. Remove Air Protect cells from headrest cover (x2).

IMPORTANT: Do not wash air protect cells. Ensure air protect cells (x2) are removed from the headrest cover before washing.




To replace headrest trim:

1. Move headrest to highest position.
2. Replace Air Protect in headrest cover.
3. Put the headrest trim on.
4. Attach the headrest button holes to plastic studs on the back of the headrest.

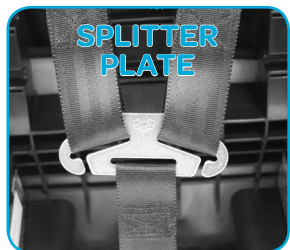

To remove seat trim:

1. Loosen harness straps to allow some slack.
2. Release J-clamps (if fitted) on the back to gain access to the shoulder straps, and undo from the splitter plate on the back of seat.
3. Pull straps through the front of the seat cover.
4. Remove the seat trim from the seat.

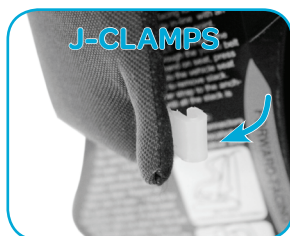

To replace seat trim:

1. Put the seat trim back on to the seat.
2. Feed the shoulder straps through the cover and attach to splitter plate.
3. (If fitted) attach the plastic J-clamps at the back.

NOTE: Ensure harness is not twisted

Care and maintenance

Removing the seat cover for cleaning

NOTE: Style and design may vary.



Infant Insert

To remove insert:

To remove the insert, undo the buckle and pull the insert out.

To replace insert:

Feed the crotch part of the buckle through the opening slot in the insert and fasten buckle assembly.



Belt Mates

To remove belt mates:

To remove the belt mates, simply undo press studs and unwrap from harness straps.

To replace belt mates:

Fit belt mates to harness straps by wrapping around straps and closing press studs.



Car Seat Protector Mat (if fitted)

To remove car seat protector mat:

To remove, loosen off the installation of your car seat, and pull the mat out from underneath.

To replace car seat protector mat:

To replace centre mat underneath car seat and tighten installation.



Stabilising Arm - Soft Cover

To remove stabilising arm - soft cover:

To remove, slowly stretch the guard off one side, followed by the other.

To replace stabilising arm - soft cover:

To replace, stretch one side of the cover over the stabilising arm, followed by the other. Check that the Maxi-Cosi logo is facing up when stabilising bar is extended.

VERY IMPORTANT:

Only replace the cover with a manufacturer's supplied replacement cover with identical shoulder height markers or a replacement cover meeting AS/NZS 8005.

Notes

[illegible]

Guarantee

Dorel Australia Pty Ltd warrants your new product to be free from defects in materials and workmanship for 10 years on the seat & 3 years on the trim, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian consumer law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Dorel Australia Pty Ltd will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Dorel Australia Pty Ltd will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase or register your product with us within 3 months from point of purchase via our website **www.maxi-cosi.com.au**. If you are having difficulties with your product contact our Customer Service Team on ph: **1300 809 526** or alternatively, via our website at **www.dorel.com.au**. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Team at **655-685 Somerville Road, West Sunshine, Vic, 3020**. Hours: 8:30 am to 5:00 pm, Monday to Friday.

For New Zealand please contact Customer Service Centre, **14 Sir William Avenue, East Tamaki, Auckland, 2013**. Auckland: **(09) 274 1040** NZ wide: **0800 628 000** (toll free). Hours: 8:00am - 4:00pm, Monday to Friday.

Our goods come with guarantees that cannot be excluded under the Australian consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Dear Customer,
Don't forget to register your product
within 3 months of purchase for
the Lifetime Warranty offer.*

Please visit to register now.

www.maxi-cosi.com.au



Suitable for models:

- CCA4 2013LG
- CCA4 2013L

© 2020 Dorel Australia, Pty Ltd. All Rights Reserved.
11/2020

*Terms and conditions apply.
Please visit our website to find out more.

