



Minla

0 M / Max 30 kg



MAXI-COSI®

We carry the future

IMPORTANT!
READ CAREFULLY AND KEEP
FOR FUTURE REFERENCE.

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



WARNINGS:

TO AVOID INJURY OR DEATH:

HIGHCHAIR MODE:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

DO NOT LEAVE CHILDREN UNATTENDED.

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED. MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.

POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.



WARNINGS:



- The weight of the child using the highchair mode should not exceed **15kg**.
- The child should be secured in the highchair at all times by the restraining system.
- The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- Not recommended for a child under 6 months old.
- Check that the highchair is fully erected and ensure that all locks are engaged before placing a child in it.
- Ensure that the highchair is placed on a flat, even, horizontal and stable surface.
- Do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces, hot liquids, window coverings, window cords and electrical cords. Position the highchair away from furniture when the chair is not being used at a table with the tray removed.



WARNINGS:



- Do not raise, lower, fold or move the highchair when a child is in it.
- Make sure children and their fingers are clear of any moving parts.
- Do not allow children to stand on the seat, as the highchair may become unstable.
- To avoid danger of suffocation, keep any plastic bags away from babies and children.
- Regularly inspect the highchair for any part that is loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Do not use the highchair if it is not working correctly and immediately seek repair.
- Use only those accessories which are supplied by Dorel Australia and approved for use with this highchair.
- This product is not intended for commercial use.



WARNINGS:



- Do not use the high chair unless all components are correctly fitted and adjusted.
- Never use the highchair with the seat pad removed.
- Failing hazard: Prevent your child from climbing on the product.
- Be aware of the risk of open fires and other sources heat in the vicinity of the product.
- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.



WARNINGS:

TO AVOID INJURY OR DEATH:

In highchair and low chair mode:

Please ensure the booster seat straps are securely stored underneath in the seat storage compartment to avoid a potential strangulation hazard.

BOOSTER MODE:

PREVENT SERIOUS INJURY OR DEATH FROM SLIDING OUT, FALLS, OR TIPPING OVER.

- **ALWAYS** secure child in the restraint until child is able to get in and out of the booster seat without help (about 2 1/2 years old). The tray is not designed to hold the child in the booster.
- **ALWAYS** use the restraint system and ensure it is correctly fitted.
- **ALWAYS** use **BOTH** sets of chair attachment straps to secure this product to an adult chair.



WARNINGS:



- **ALWAYS** check the security and the stability of the chair mounted seat before use.
- **ALWAYS** use the booster on a chair with seat dimensions larger than the booster.
- **NEVER** leave the child unattended.
- **NEVER** allow child to push away from table.
- **NEVER** lift this product with your child in it.
- **DO NOT** use for a child who cannot sit up unassisted.
- **DO NOT** use in motor vehicles.
- **DO NOT** use the chair mounted seat on stools, benches, unstable chairs or folding chairs.
- **DO NOT** use if any part is missing, torn or broken.
- **DO NOT** use any accessories or replacement parts unless specifically identified by the manufacturer.

Booster Mode (Chair mounted seat) is intended for children able to sit up unaided (minimum 6 months) and up to 3 years old or a maximum weight of 15kgs.



WARNINGS:



- **ALWAYS** use both sets of chair straps to completely secure booster to the chair.
- If chair is cushioned and cushion cannot be removed, **BE CERTAIN** that the bottom chair strap is fastened snugly after putting child in seat.
- Make sure all pieces are assembled correctly. Test for proper assembly before placing child in seat.
- ALWAYS ensure that all chair protector pads are located completely on the adult chair surface.

Index







EN Assembling

FR Montage

DE Montage

NL Montage

ES Montaje

IT Montaggio

PT Montagem

SV Montering

DA Montering

FI Asennus

PL Montaż

NO Montering

RU Сборка

TR Montaj

HR Sastavljanje

SK Montáž

BG Монтиране

UK Монтаж

HU Szerelés

SL Montaža

ET Komplekteerimine

CZ Montáž

EL Συναρμολόγηση

 
 
 
 
RO Asamblar

 
 
HE הרכבה

AR التجميع



www.maxi-cosi.com/minla

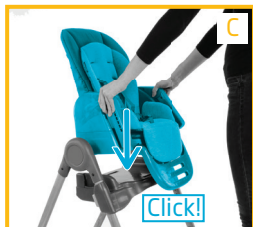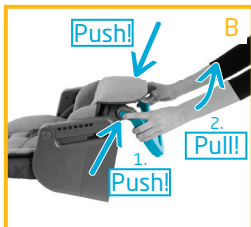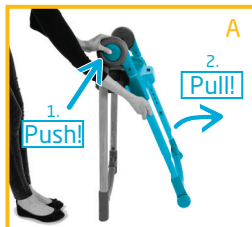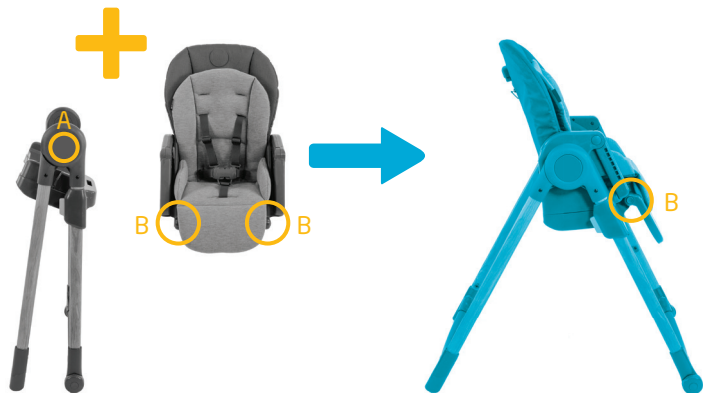

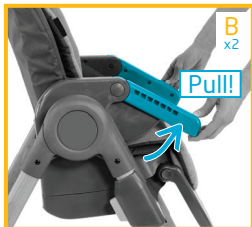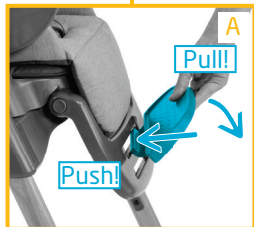



EN Use
FR Usage
DE Verwendung
NL Gebruik
ES Uso
IT Utilizzo
PT Utilização
SV Användning
DA Brug
FI Käyttö
PL Użytkowanie
NO Bruk
RU Использование

 
 
 
 
TR Kullanım
HR Uporaba
SK Použitie
BG Употреба
UK Використання
HU Használat
SL Uporaba
ET Kasutamine
CZ Použití
EL Χρήση
RO Folosire
HE שימוש
AR الاستخدام



www.maxi-cosi.com/minla






1.

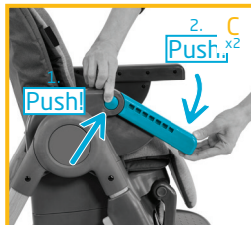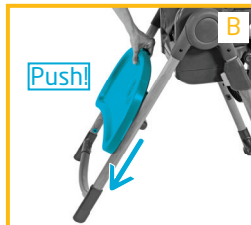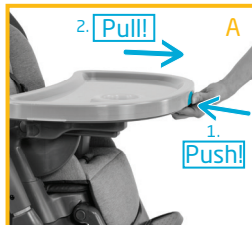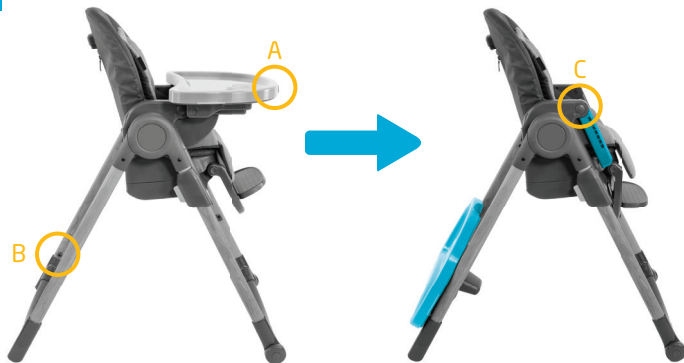







   2.

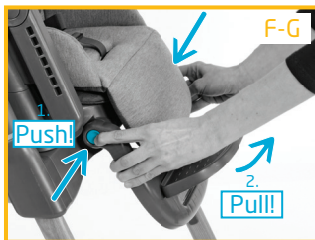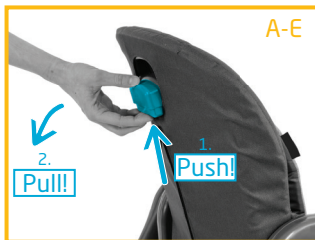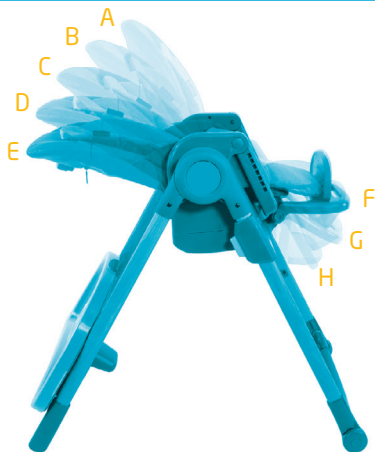





    3.

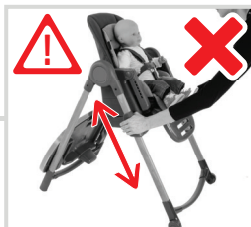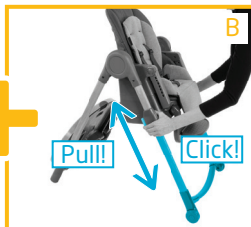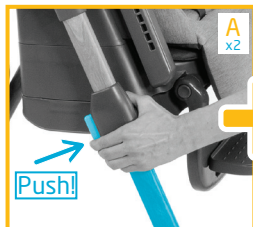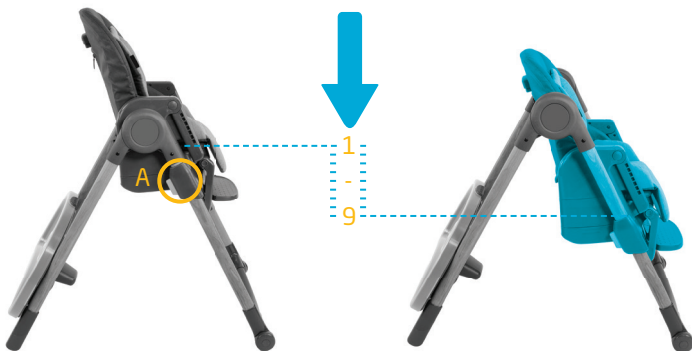






  4.

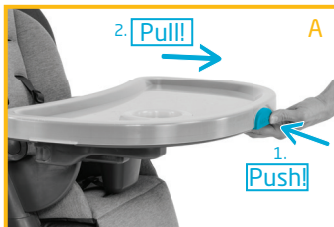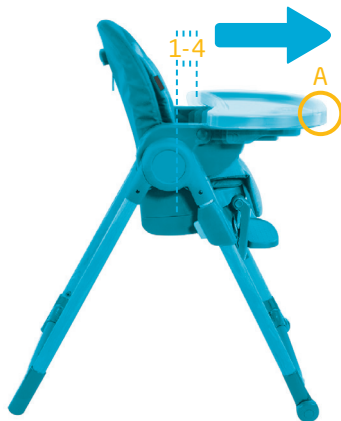









 
 
 
5.

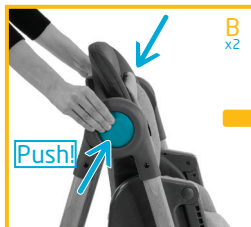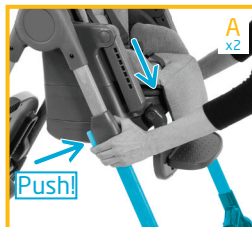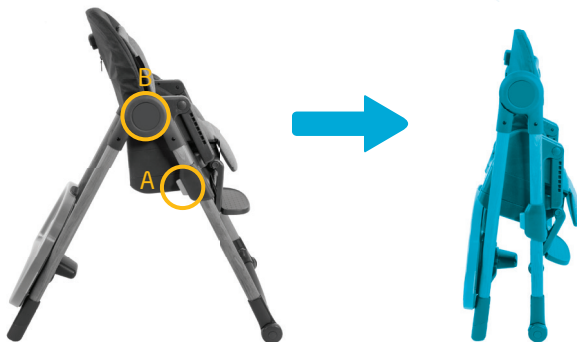



        
 
6.

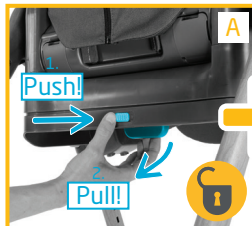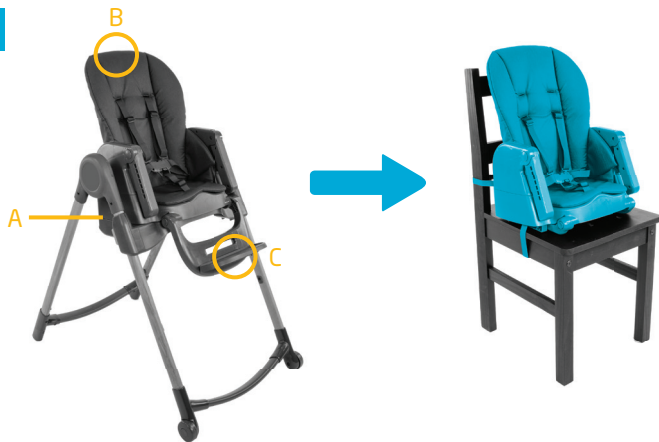


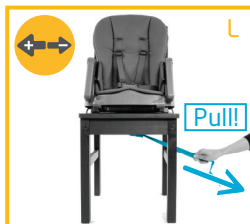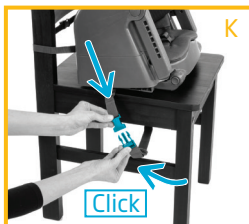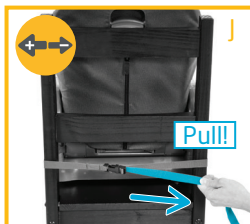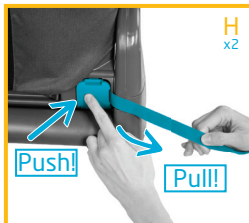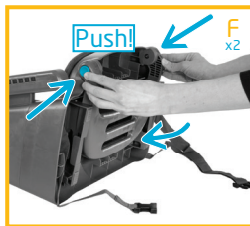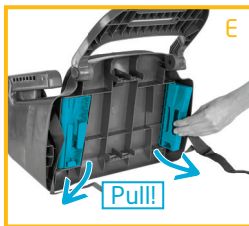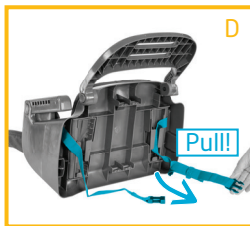




    7.

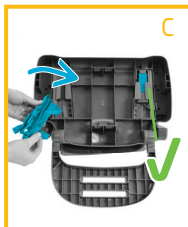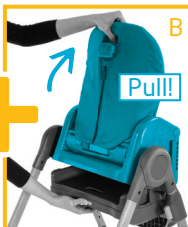

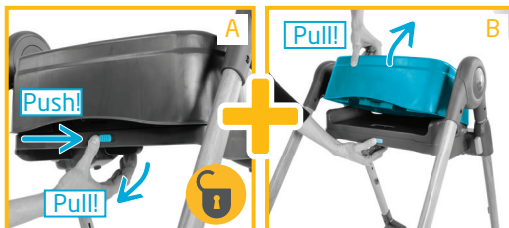

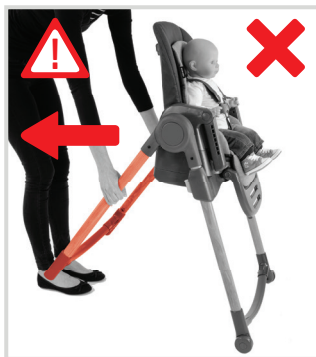





EN	Child installation	TR	Çocuğun yerleştirilmesi
FR	Installation de l'enfant	HR	Stavljanje djeteta
DE	Anschlallen des Kindes	SK	Inštalácia pre deti
NL	Plaatsen van het kind	BG	Монтиран продукт за деца
ES	Instalación del niño	UK	Розміщення дитини
IT	Accomodare il bambino	HU	Gyermekek behelyezése
PT	Instalação da criança	SL	Namestitev otroka
SV	Placera barnet	ET	Lapse paigutamine
DA	Barneinstallation	CZ	Umístění dítěte
FI	Lapsen asettaminen	EL	Τοποθέτηση του παιδιού
PL	Umieszczenie i zabezpieczenie dziecka	RO	Introducerea copilului
NO	Plassering av barnet	HE	הושבת הילד
RU	Размещение ребенка	AR	تثبيت الطفل



  www.maxi-cosi.com/minla



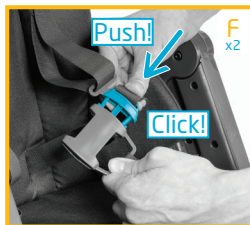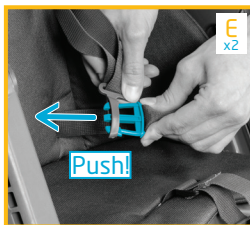



1.



0 M / Max 9 kg



2.



6 M / Max 15 kg





3.



6 M / Max 15 kg



4.



 
6 M / Max 15 kg



25 cm

42 cm

36 cm






5.



 6 M / Max 15 kg

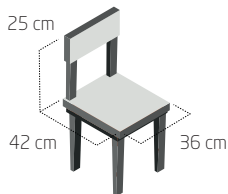

6.



36 M / Max 30 kg





Securing your child

- The harness strap can be adjusted by moving each strap's slider.
- The buckle is released by squeezing the buckle tongues together.



WARNINGS:



- Use this harness at all times
- A five-point harness is provided to secure your child
- When not in use disconnect shoulder straps from the waist strap and buckle.



EN Washing

FR Lavage

DE Reinigung

NL Reinigen

ES Lavado

IT Lavaggio

PT Lavagem

SV Tvättråd

DA Vask

FI Pesu

PL Czyszczenie

NO Rengjøring

RU Чистка

TR Yıkama

HR Pranje

SK Pranie

BG Почистване

UK Прання

HU Mosás

SL Pranje

ET Pesemine

CZ Praní

EL Πλύσιμο

 
RO Spălare

HE כביסה

AR غسّل



www.maxi-cosi.com/minla

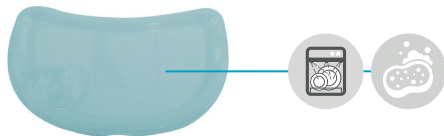



Care and maintenance

- Always store the unit in a clean and dry place.
- Wipe with soft, damp cloth and warm, soapy water and allow to dry.
- A mild disinfectant may be used if desired.
- Do not use abrasives, spray lubricants, bleach or strong detergents.
- Regularly check for loose parts and tighten when required. Damaged or broken parts should be replaced.
- The tray table cover is dishwasher safe.
- Harness and crotch straps should be surface washed and air dried only.
- Do not place harness in washing machine or dryer.

SAFETY



Reclined Cradle 9 kg

Our products have been carefully designed and tested to ensure your baby's safety and comfort.

WARNING:

- Never leave the child unattended.
- Do not use the reclined cradle once your child can sit unaided.
- This reclined cradle is not intended for prolonged periods of sleeping.
- It is dangerous to use this reclined cradle on an elevated surface, e.g. a table.
- Always use the restraint system.

- Never use the toy bar to carry the reclined cradle.

Additional information

1. The maximum weight is 9 kg.
2. This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
3. Do not use the reclined cradle if any components are broken or missing.
4. Do not use accessories or replacement parts other than those approved by the manufacturer.



High Chair 6 months / 15 kg

Our products have been carefully designed and tested to ensure your baby's safety and comfort.

WARNING:

- Never leave the child unattended.
- Always use the restraint system.
- Falling hazard: Prevent your child from climbing on the product.
- Do not use the product unless all components are correctly fitted and adjusted.
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

- Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

Additional information

1. Do not use the product until the child can sit up unaided;
2. Do not use the product if any part is broken, torn or missing;
3. Please keep children away when unfolding and folding the product to avoid injury;
4. This High Chair is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg.



Chair mounted seat / Booster Seat 6 months / 15 kg

Our products have been carefully designed and tested to ensure your baby's safety and comfort.

WARNING:

- Never leave the child unattended.
- Always use the restraint system and ensure it is correctly fitted.
- Always use the chair attachment system and ensure it is correctly fitted before use.
- Always check the security and the stability of the product on the adult chair before use.
- Do not use this product on stools or benches.

Additional information

1. This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg;
2. Always ensure that the adult chair with the chair mounted seat is placed in a position where the child is not able to use its feet to push against the table or any other structure as this can cause the tip over of the adult chair supporting the chair mounted seat.
3. Do not to use the chair mounted seat if any part is broken, torn or missing.
4. Do not to use accessories or replacement parts other than those approved by the manufacturer.



Child stool 3 years / 30 kg

Our products have been carefully designed and tested to ensure your baby's safety and comfort.



Product care advice

- The product must be maintained regularly to provide full satisfaction. We advise you to check and if necessary clean mechanical parts every fortnight.
- Do not force it if it becomes difficult to fold it up or unfold it. Clean the product. If difficulties persist, contact your supplier.
- Caring: Use a sponge and mild soap. Do not use detergent.
- For washing the garment, please consult the instruction label.

Environment

For environmental reasons, when you have stopped using this product, we ask that you dispose of the product in the proper waste facilities in accordance with local legislation.

Questions

Please contact your local distributor or visit our website. When doing so please have the following information to hand:

- Serial number
- Age (height) and weight of your child.

Warranty

Our 24 months warranty reflects our confidence in the high quality of our design, engineering, production and product performance. We confirm that this product was manufactured in accordance with the current Australian safety requirements and quality standards which are applicable to this product, and that this product is free from defects on materials and workmanship at the time of purchase. Under the conditions mentioned herein, this warranty may be invoked by consumers in the countries where this product has been sold by a subsidiary of the Dorel Group or by an authorized dealer or retailer.

Our 24 months warranty covers all manufacturing defects in materials and workmanship when used in normal conditions and in accordance with our user manual for a period of 24 months from the date of the original retail purchase by the first end-user customer. To request repairs or spare parts under our warranty for defects in materials and workmanship you must present your proof of purchase,

made within the 24 months preceding the service request.

Our 24 months warranty does not apply to defects caused by normal wear and tear, damage caused by accidents, abusive use, negligence, fire, liquid contact or other external cause, damage which is the consequence of failing to comply with the user manual, damage caused by use with another product, damage caused by service by anyone who is not authorized by us, or if the product is stolen or if any label or identification number has been removed from the product or has been changed. Examples of normal wear and tear include wheels and fabric worn down by regular use and the natural breakdown of colors and materials due to normal aging of the product.

What to do in case of defects:

Should problems or defects arise, your first point of contact is the authorized dealer or retailer recognized by us. Our 24 months warranty is recognized by them. You must present your proof of purchase, made within the 24 months preceding the service request. It is easiest if you get your service request pre-approved by us. If you submit

a valid claim under this warranty, we may by us or that you ship the product to us in accordance with our instructions. We will pay for shipment and for return freight if all instructions are followed. Damage and/or defects neither covered by our warranty nor by the legal rights of the consumer and/or damage and/or defects with respect to products that are not covered by our warranty can be handled at a reasonable fee.

Rights of the consumer:

A consumer has legal rights pursuant to applicable consumer legislation, which may vary from country to country. The rights of the consumer under applicable national legislation are not affected by this warranty.



Minla
0 M / Max 30 kg



DOREL AUSTRALIA PTY LTD

655-685 Somerville Road
Sunshine West Victoria 3020
Hours: 8:30 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.com.au
Phone: 1300 809 526

IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue
East Tamaki Auckland 2013
Hours: 8:00 am - 5:00 pm Mon-Fri

Email: customerservice@dorel.co.nz
Phone: 0800 628 000 (toll free)

Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2018 Dorel Australia Pty Ltd.

All Rights Reserved.
www.dorel.com.au
8/2019

